Hitch Installation Instructions


REV.20260901D

Part#	HT-X37545	Application	Kia Sedona All

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	2	M12X1.75-50	4#	Conical Washers	4	M12
	2#	Hex Flange Nuts	2	M12X1.75	5#	Spacers	4	With SQ Hole
	3#	Hex Bolts	4	M12X1.5-40				
HW A (For Hitch Assembly)	6#	Hex Bolts	8	M12X1.75-35	8#	Hex Flange Nuts	8	M12X1.75
	7#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 300 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
***DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. ***

*** No Drilling Required**

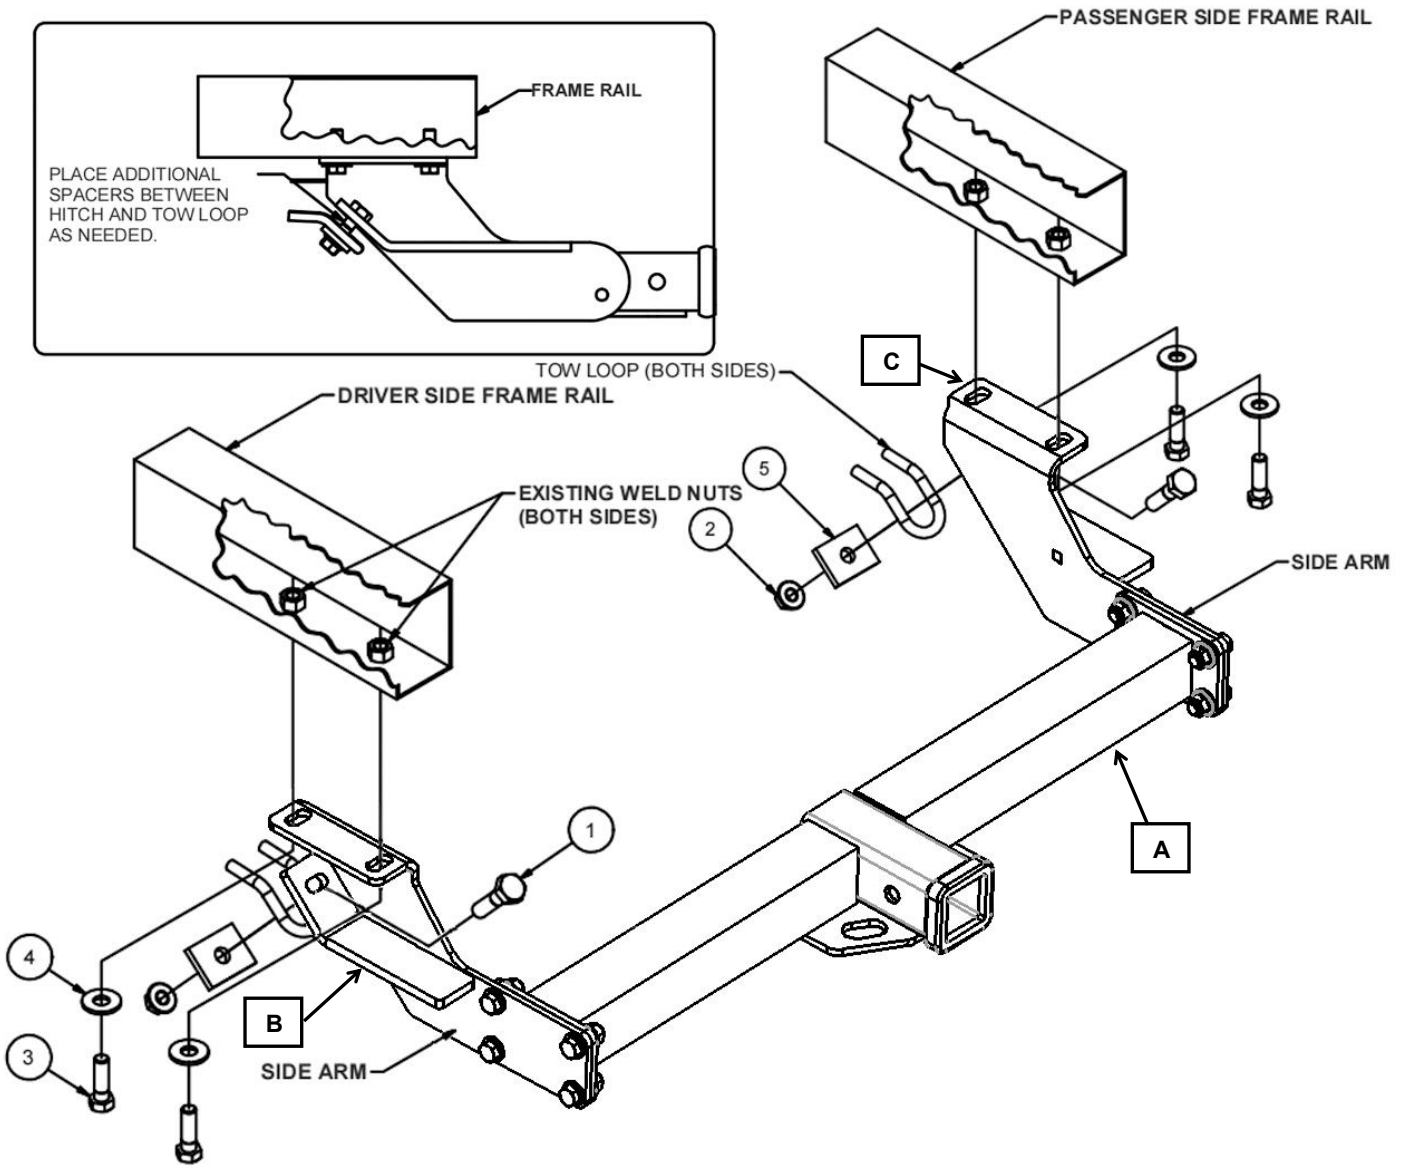

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Hitch Installation Instructions

Part#	**HT-X37545**	Application	**Kia Sedona All**

Step	Description
1	Assemble Hitch Body (**A**) and Mounting Brackets (**B, C**) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "**HW A"**). **Note: Finger tighten only. Do not tighten hardware at this time.**
2	Remove four 12mm bolts securing the bumper brackets inside frame rail. Do not move bumper. Position hitch on bottom of frame rails with side arms on top of vehicle tow loops.
3	Fasten hitch to frame using (4) M12X1.5-40mm Hex bolts (3#) in locations where bolts were removed in step 2.
4	Fasten side arms to tow loop using M12X1.75-50 Hex bolts (1#) , Hex Flange Nuts and Spacer plates as shown. Use additional spacers as needed.
5	Torque all M12 fasteners to 86 lb-ft.
*****Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.**	

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!