



Hitch Installation Instructions


REV.20260601D

Part#	HT-X37615	Application	Cadillac Escalade All / GMC Yukon / Chevrolet Tahoe Excluding 5.7 / Chevrolet Avalanche / Suburban 1500/2500 All
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Spacers	4	With SQ Hole	4#	Hex Bolts	4	M14X2-40
	2#	Lock Washers	2	M14	5#	Carriage Bolts	4	M12X1.75-45
	3#	Hex Flange Nuts	4	M12X1.75	6#	Conical Washers	2	M14
HW A (For Hitch Assembly)	7#	Hex Bolts	8	M12X1.75-35	9#	Hex Flange Nuts	8	M12X1.75
	8#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

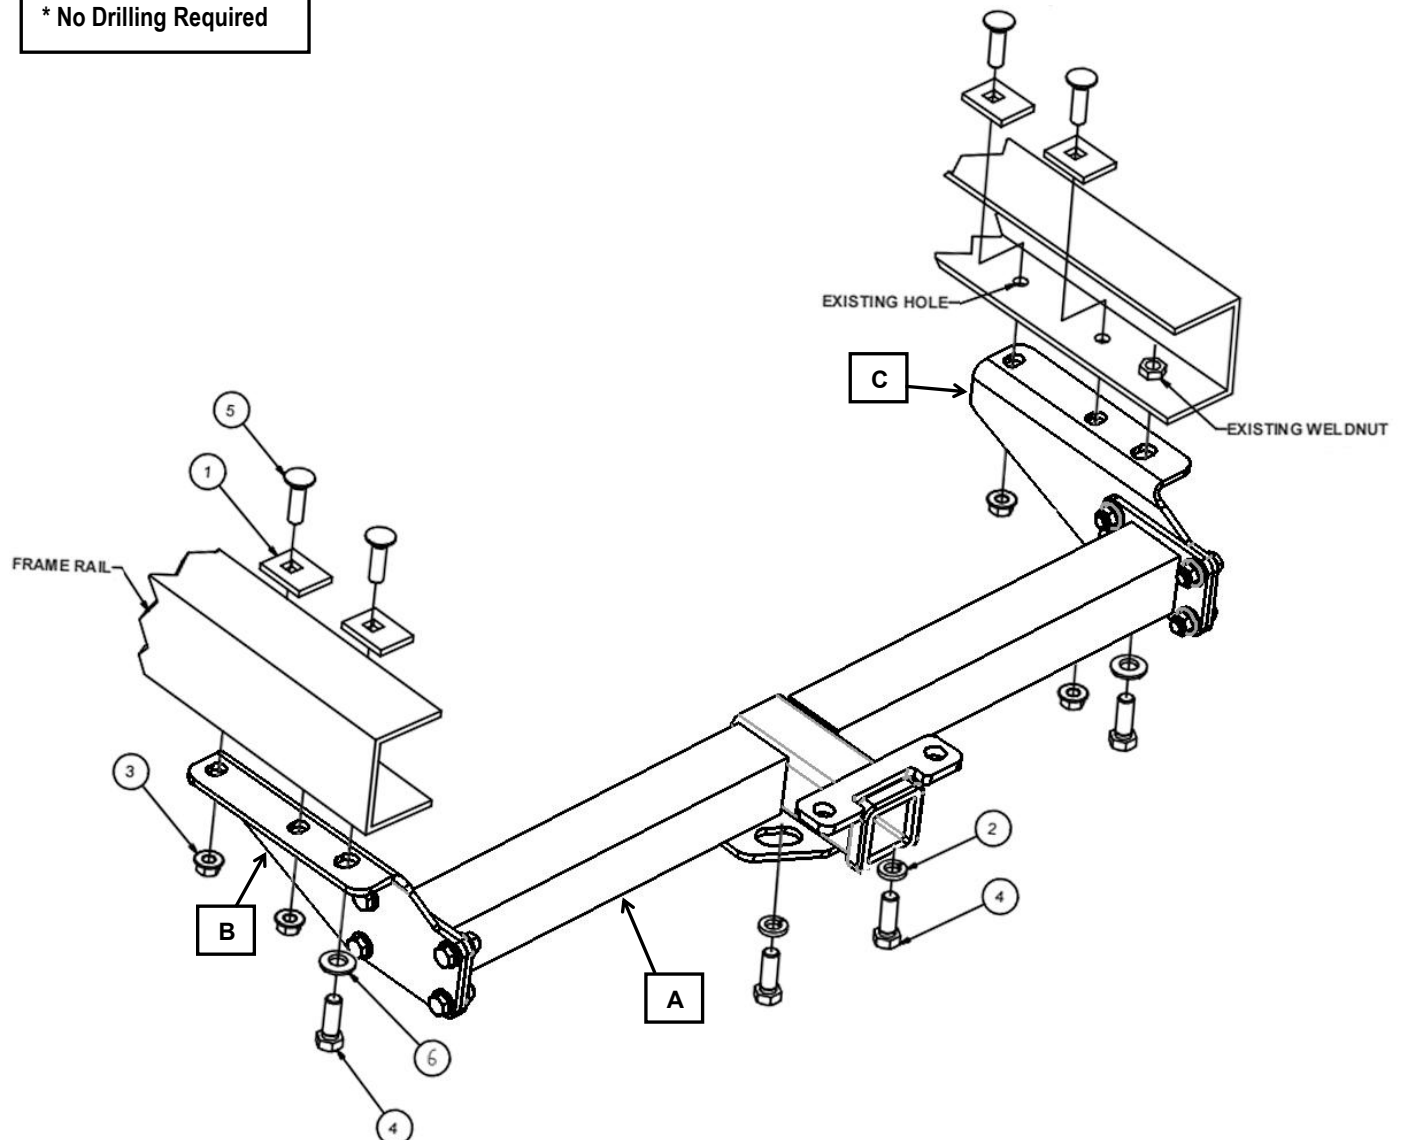

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X37615	Application	Cadillac Escalade All / GMC Yukon / Chevrolet Tahoe Excluding 5.7 / Chevrolet Avalanche / Suburban 1500/2500 All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove the 14mm hex bolt from each end of the frame.		
3	Raise the hitch into position, install the fasteners as shown.		
4	Torque M12 carriage bolts to 58 lb-ft and other M12 fasteners to 86 lb-ft. Torque all M14 fasteners to 140 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!