



Hitch Installation Instructions

REV.20260801D

Part#	HT-X37686	Application	Mitsubishi Montero Sport All
-------	-----------	-------------	------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Large Flat Washers	4	M10	4#	Hex Bolts	2	M12X1.25-35
	2#	Conical Washers	2	M12	5#	Hex Bolts	4	M10X1.5-130
	3#	Hex Flange Nuts	4	M10X1.5				
HW A (For Hitch Assembly)	6#	Hex Bolts	6	M12X1.75-35	8#	Lock Washers	6	M12
	7#	Flat Washers	10	M12	9#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****



* No Drilling Required

RUBBER ISOLATOR REMOVAL DIAGRAM

This technique can be used if and Exhaust Hanger Removal Pliers is not available.

Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.

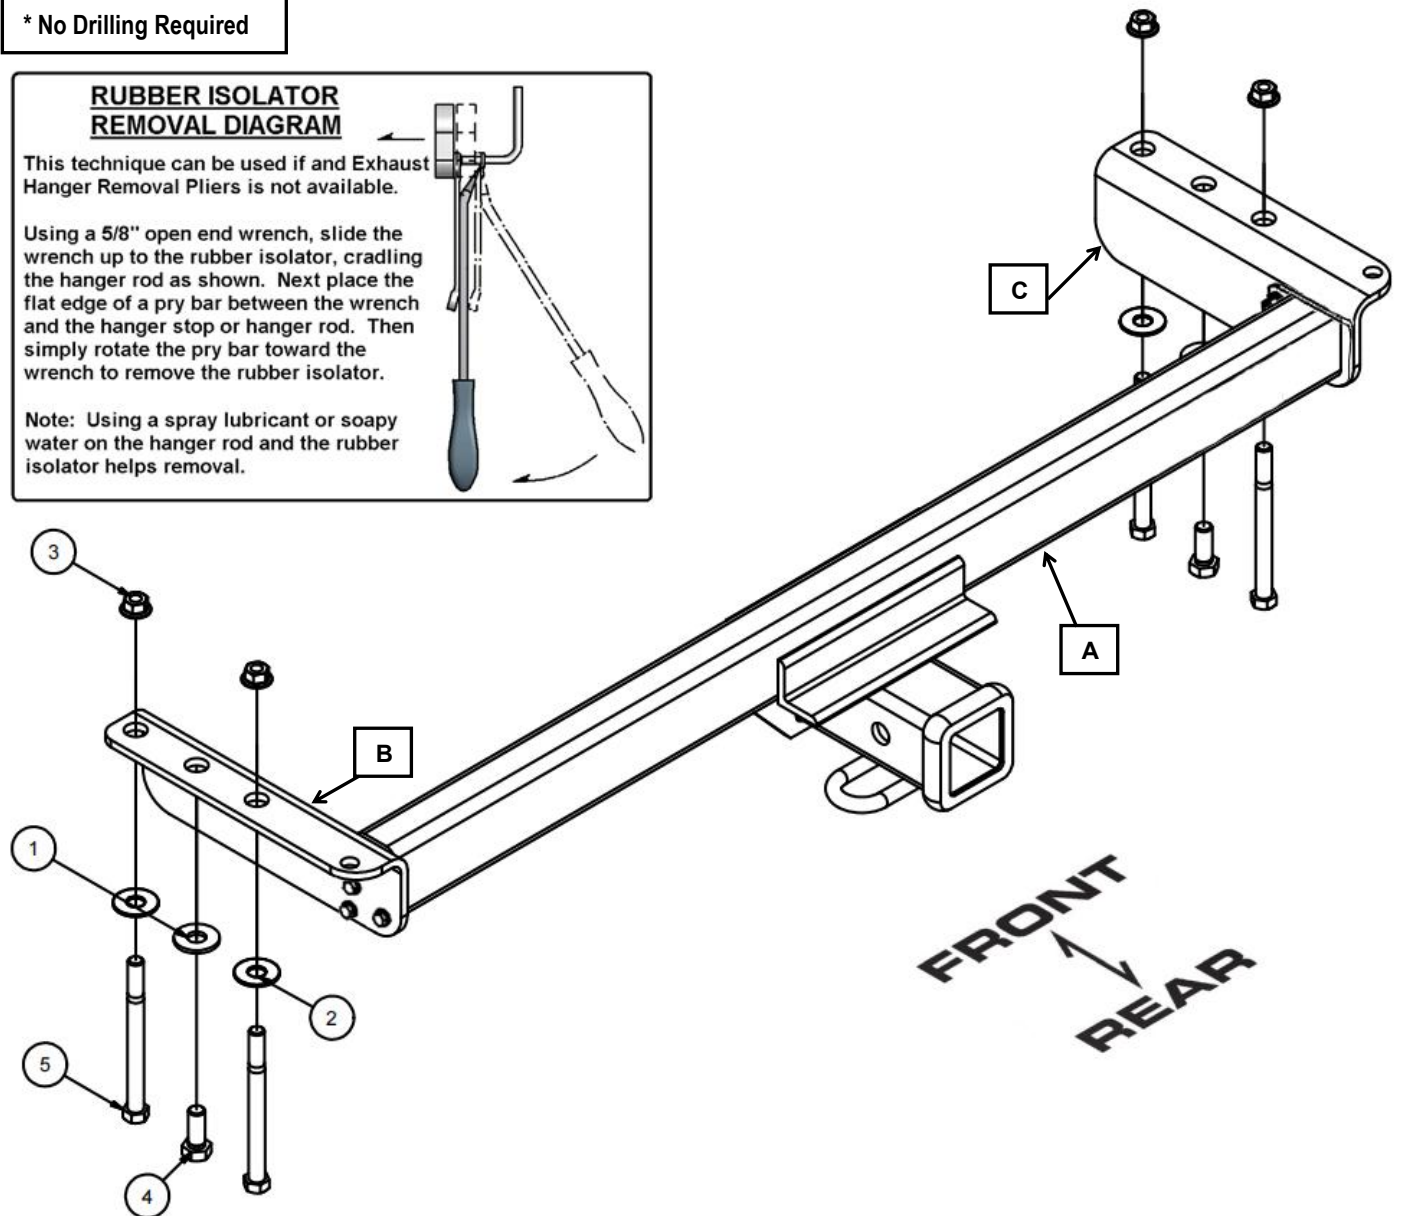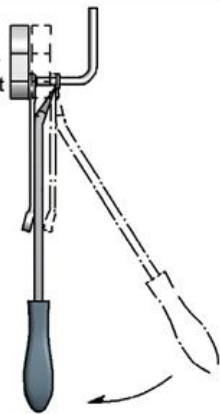

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X37686	Application	Mitsubishi Montero Sport All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in “HW A”). Note: Torque all “HW A” fasteners to 86 lb-ft.		
2	Remove tow hooks if present. If tow hooks are not present remove the existing hardware from the frame.		
3	It may be necessary to lower or remove the spare tire.		
4	For ease of installation you may choose to lower the exhaust.		
5	Raise the hitch into position and attach it with the fasteners as shown. Torque the M12 hardware to 86 ft-lbs and the M10 hardware to 50 ft-lbs.		
6	Re- attach the exhaust and return the spare tire to its proper location.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!