



Hitch Installation Instructions


REV.20260801D

Part#	HT-X38400	Application	Volkswagen EuroVan All \ Volkswagen Transporter All
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Handle Nut Plate	1	M12X1.75	4#	Hex Flange Nut	1	M12X1.75
	2#	Hex Bolts	4	M12X1.5-40	5#	Hex Bolts	2	M12X1.75-35
	3#	Conical Washers	6	M12				
HW A (For Hitch Assembly)	6#	Hex Bolts	8	M12X1.75-35	8#	Hex Flange Nuts	8	M12X1.75
	7#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

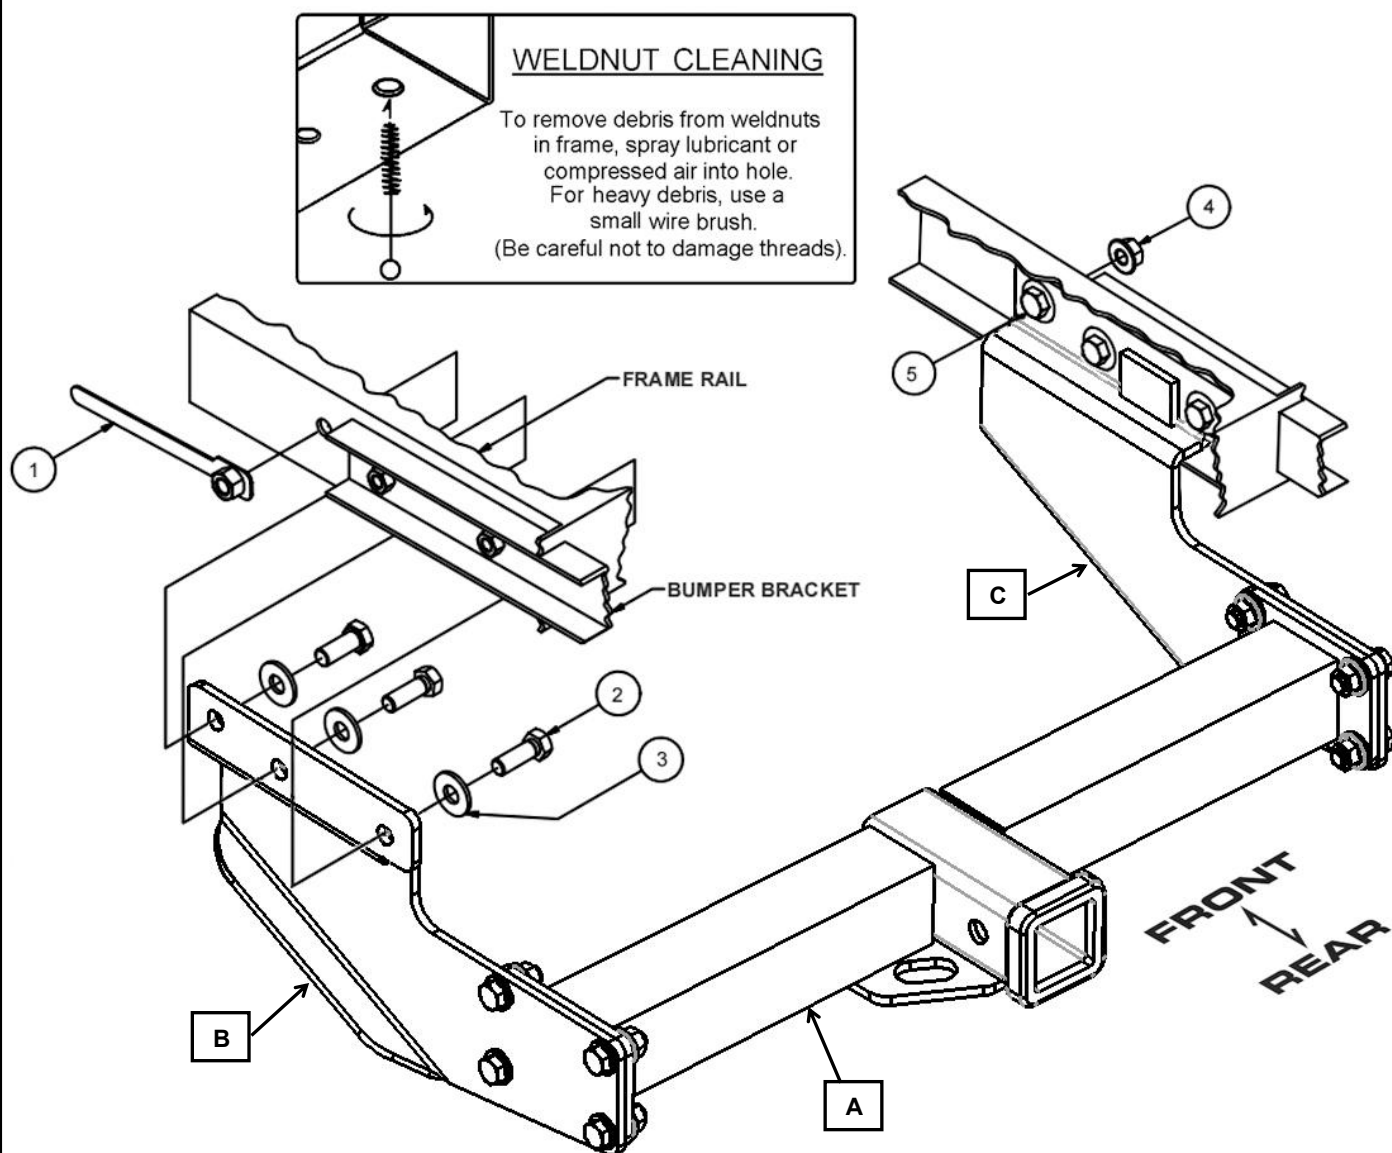

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X38400	Application	Volkswagen EuroVan All \ Volkswagen Transporter All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-40mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not tighten hardware at this time.		
2	Remove the two rear most frame bolts that attach the bumper brackets to the frame rails. Mount side plates to inner surface of frame rails aligning rear most holes with existing weldnuts in bumper bracket. Loosely install fasteners as shown. (Note: It may be necessary to remove plastic clips holding wire bundle inside passenger side frame.)		
3	Mount receiver assembly between frame plates and install fasteners as shown.		
4	Torque all M12 fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!