



## Hitch Installation Instruction

REV.20251001

Part#	HT-X39100	Application	For 1999-2006 Suzuki Grand Vitara All\1999-2004 Suzuki Vitara All\2002-2006 Suzuki XL-7 All\1999-2004 Chevrolet Tracker All				
-------	-----------	-------------	---	--	--	--	--


Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	4	M12X1.25-40	3#	Lock Washers	4	M12
	2#	Flat Washers	4	M12				
HW A (For Hitch Assembly)	4#	Hex Bolts	8	M12X1.75-35	6#	Hex Flange Nuts	8	M12
	5#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.

Gross Load Capacity When Used As A Weight Distribution Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

\* No Trimming Required  
\* No Drilling Required

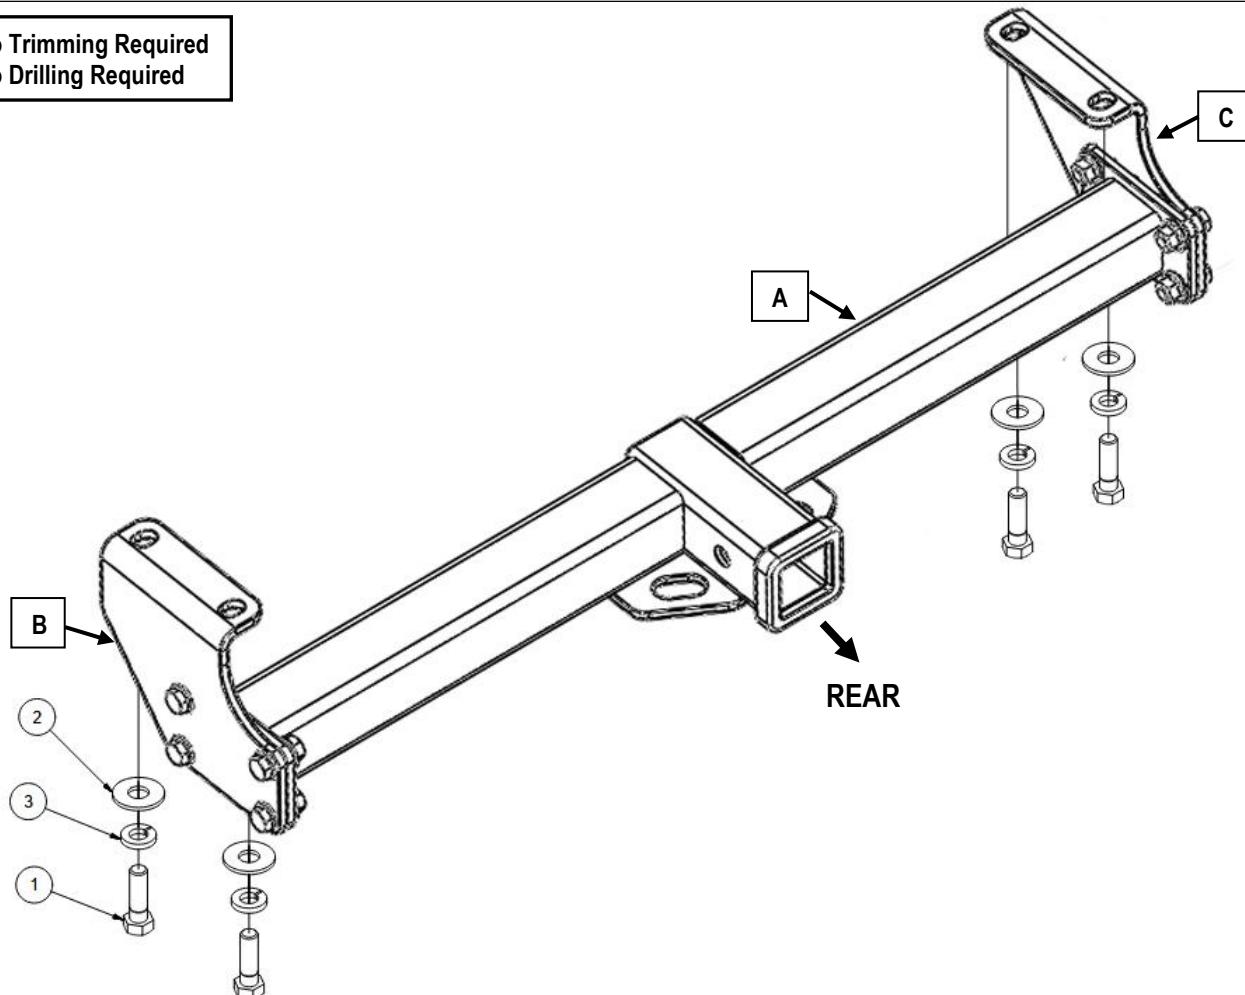

Step	Description
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts.(Hardware in "HW A"). <b>Note: Finger tighten only. Do not fully tighten at this time.</b>
2	Raise hitch into position and insert M12 fasteners as shown through hitch and into existing frame weldnuts.
3	Torque all M12 fasteners to 86 lb-ft.

\*\*\*Periodically Check The Receiver Hitch To Ensure That All Fasteners \*\*\*  
Are Tight & All Structural Components Are Sound.

The instruction here is for your reference only. We strongly recommend the professional installer for best result.  
We are not responsible for any damage caused by the installation. Thank you for choosing our product!