



Hitch Installation Instructions


REV.20260701D

Part#	HT-X39161	Application	Jeep Compass All \ Jeep Compass All, Including Rallye package \ Jeep Compass Limited/Sport \ Jeep Patriot All
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
	1#	Hex Flange Nuts	4	M12X1.75	3#	Large Flat Washers	4	M12
HW B (For Hitch Installation)	2#	Hex Bolts	4	M12X1.75-100				
	4#	Hex Bolts	6	M12X1.75-35	6#	Lock Washers	6	M12
HW A (For Hitch Assembly)	5#	Flat Washers	10	M12	7#	Hex Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* Lower Exhaust Required

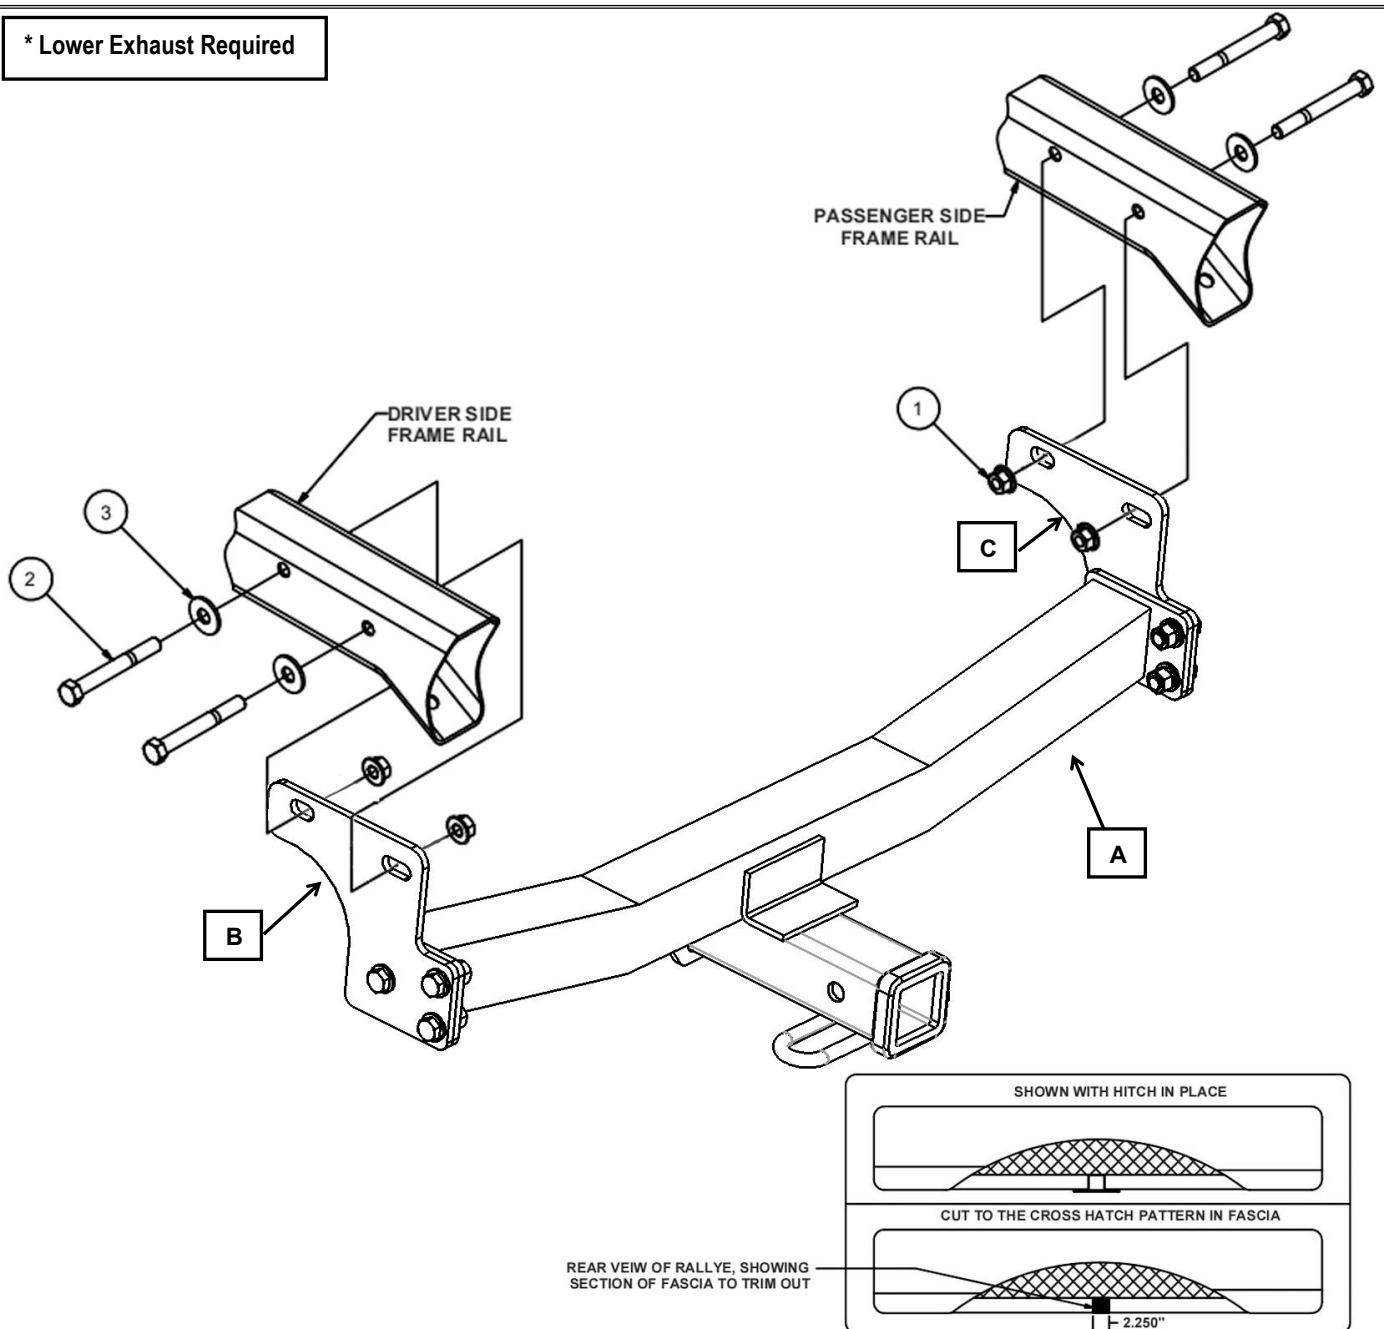

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X39161	Application	Jeep Compass All \ Jeep Compass All, Including Rallye package \ Jeep Compass Limited/Sport \ Jeep Patriot All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in "HW A"). Note: Torque all M12 fasteners to 86 lb-ft.		
2	Lower exhaust hangers on both the driver and passenger side. Support while installing hitch		
3	Insert M12 hex bolts with washers into the frame rails from the outside. Raise the hitch into position between the frame rails. Make sure to tilt the driver side of the hitch into position first. Push bolts through mounting plates and loosely install M12 hex nuts.		
4	Torque all M12 fasteners to 86 lb-ft.		
5	Re-install exhaust.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!