



Hitch Installation Instructions


REV.20260801D

Part#	HT-X39408	Application	CCadillac Escalade All / Chevrolet Blazer All / Chevrolet/GMC C/K1500/C/K2500 Suburban All /Chevrolet Suburban 1500/2500 / Chevrolet Tahoe All / Chevrolet Tahoe/GMC Yukon 5.7L / GMC Yukon All
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Flange Nuts	6	M12X1.75	3#	Carriage Bolts	6	M12X1.75-50
	2#	Spacers	6	With SQ Hole	4#	Fishwire	1	L=762
HW A (For Hitch Assembly)	5#	Hex Bolts	8	M12X1.75-35	7#	Hex Flange Nuts	8	M12X1.75
	6#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

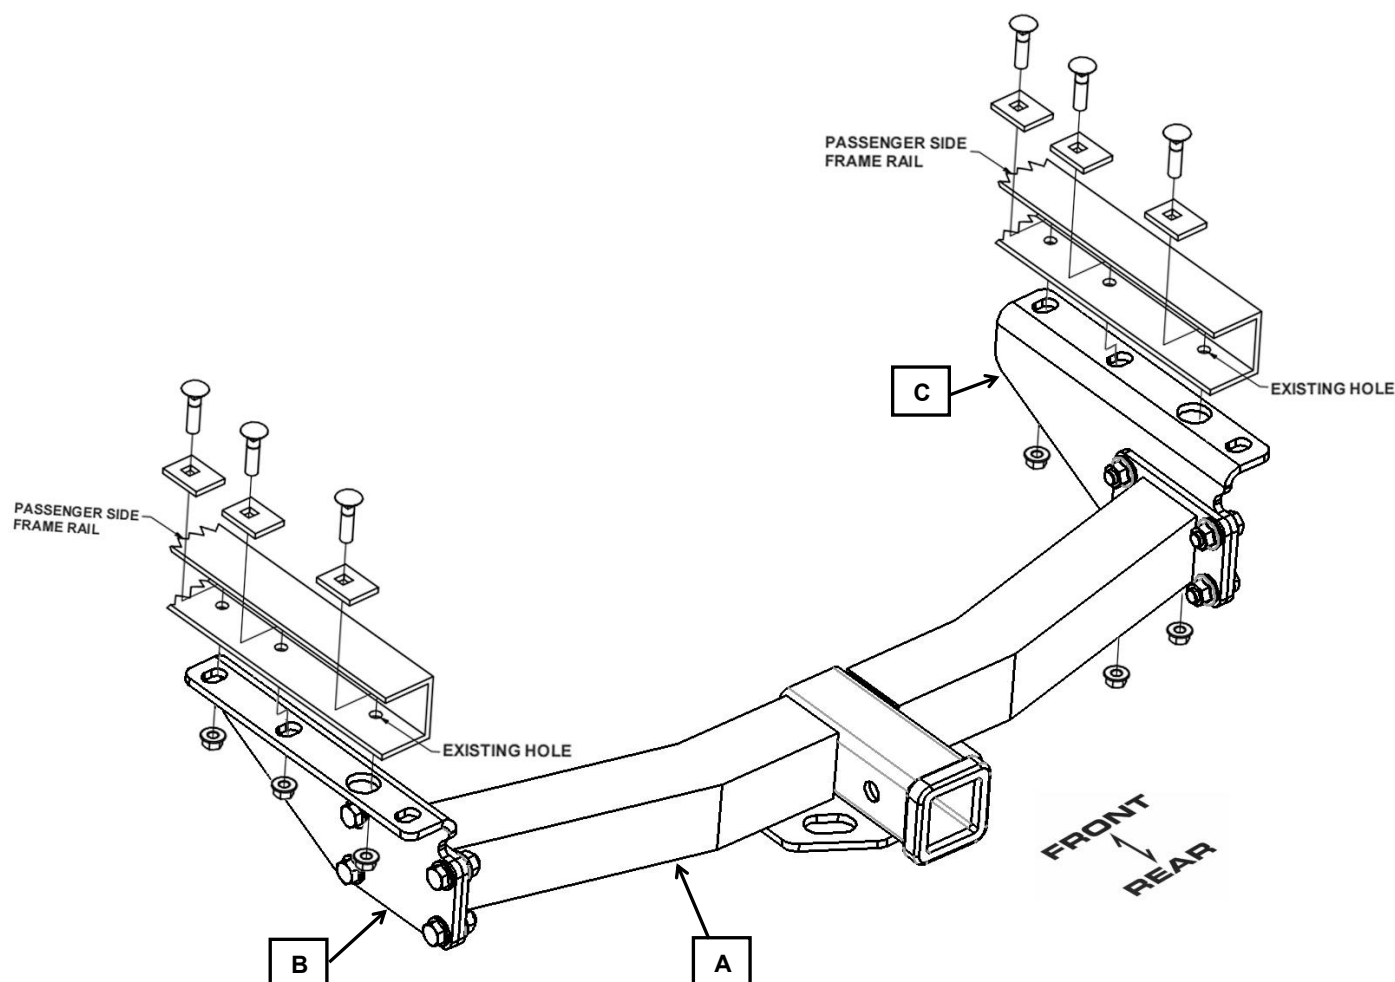

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X39408	Application	CCadillac Escalade All / Chevrolet Blazer All / Chevrolet/GMC C/K1500/C/K2500 Suburban All /Chevrolet Suburban 1500/2500 / Chevrolet Tahoe All / Chevrolet Tahoe/GMC Yukon 5.7L / GMC Yukon All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Torque all HWA to 86 lb-ft		
2	Install fasteners as shown. Some models may require mounting hole to be reamed out to 1/2".		
3	Installations on boxed-in frames will be made easier by fishwiring the bolts and spacers into the holes from an existing access hole. Wrap a wire around the threads of the bolt at the end and pull wire, bolt and spacers back through the access hole through the attachment hole.		
4	Raise the hitch into position, taking care not to push bolts back into frame. The large slot on each side fits over the rivet. Secure each bolt with a 1/2" flange nut.		
5	Torque all fasteners to 110 lb.-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!