




Hitch Installation Instructions

REV.20260501

Part#	HT-X30135	Application	Subaru Crosstrek All \ Subaru XV Crosstrek All
-------	-----------	-------------	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	L-Spacers	2	With SQ Hole	6#	Ser-Flange Nuts	2	M12X1.75
	2#	Carriage Bolts	2	M12X1.75-40	7#	Ser-Flange Nuts	2	M10X1.5
	3#	Carriage Bolts	2	M10X1.5-40	8#	Fish Wire	1	L=762
	4#	S-Spacers	2	With SQ Hole	9#	Fish Wire	1	L=510
	5#	Spacers	2	With Round Hole				
HW A (For Hitch Assembly)	10#	Hex Bolts	8	M12X1.75-35	12#	Hex Flange Nuts	8	M12
	11#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 525 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

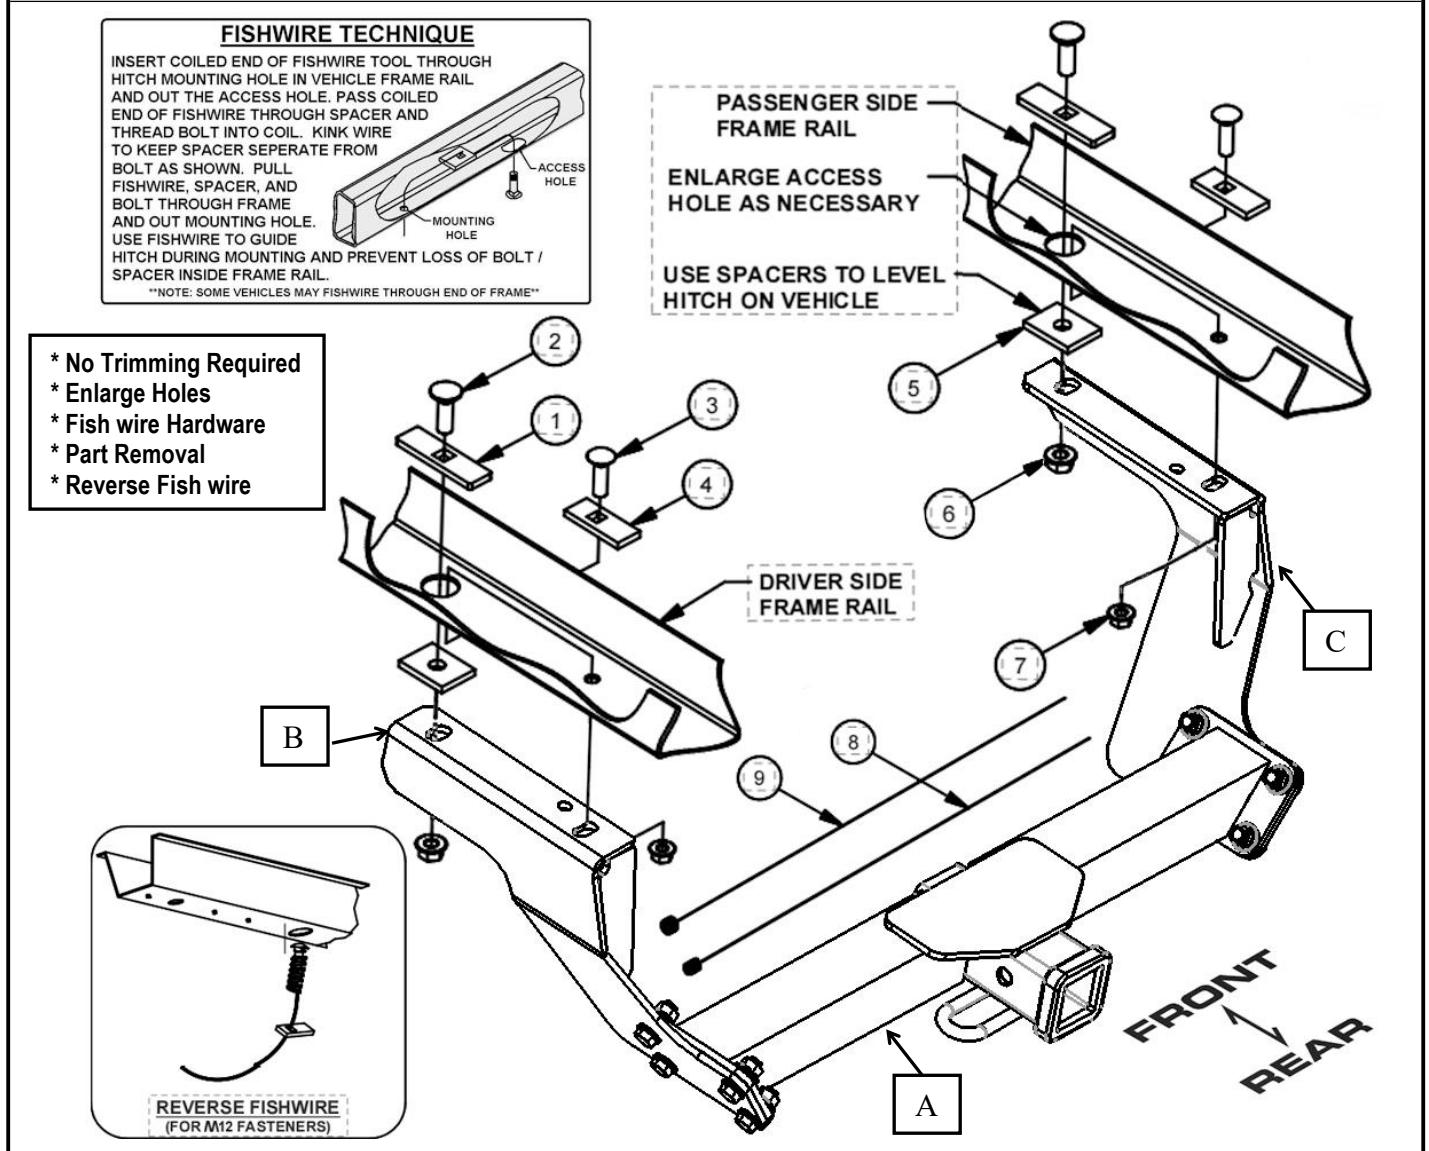

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X30135	Application	Subaru Crosstrek All \ Subaru XV Crosstrek All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove the (4) plugs in the frame rails and discard (leave center plugs in).		
			
3	Fish wire M10 carriage bolts and spacers into position first and reverse fish wire the M12 carriage bolts and spacers into position afterward (enlarge access hole as necessary).		
			
4	Raise hitch to the frame aligning the holes in the hitch with the bolts. Use Round Spacers to level hitch as necessary.		

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X30135	Application	Subaru Crosstrek All \ Subaru XV Crosstrek All
NOTE: Be careful not to push the bolts in the frame.			
5	Install remaining supplied hardware, as shown on page 2.		
 			
6	Torque M12 Carriage Bolts to 58 lb-ft and torque other M12 fasteners to 86 lb-ft . Torque M10 Carriage Bolts to 34 lb-ft and torque other M10 fasteners to 50 lb-ft .		

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!