




Hitch Installation Instruction

REV.20241201



Part#	HT-X30370	Application	For 2018-2025 Honda Odyssey All
-------	-----------	-------------	---------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	4	M12X1.25-35	4#	Conical Washers	4	M12
	2#	Carriage Bolts	2	M10X1.5-35	5#	Spacers	2	SQ Hole
	3#	Hex Flange Nuts	2	M10X1.5	6#	Fish Wires	2	
HW A (For Hitch Assembly)	7#	Hex Bolts	8	M12X1.75-35	9#	Hex Flange Nuts	8	M12X1.75
	8#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch:3500 LBS. Trailer Weight & 525 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 5000 LBS. Trailer Weight & 525 LBS. Tongue Weight
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. *****

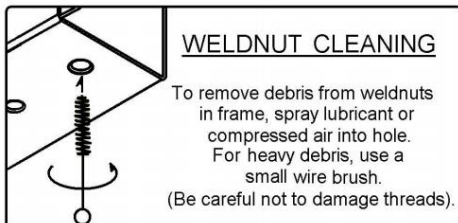

* Trimming Maybe Required
* No Drilling Required

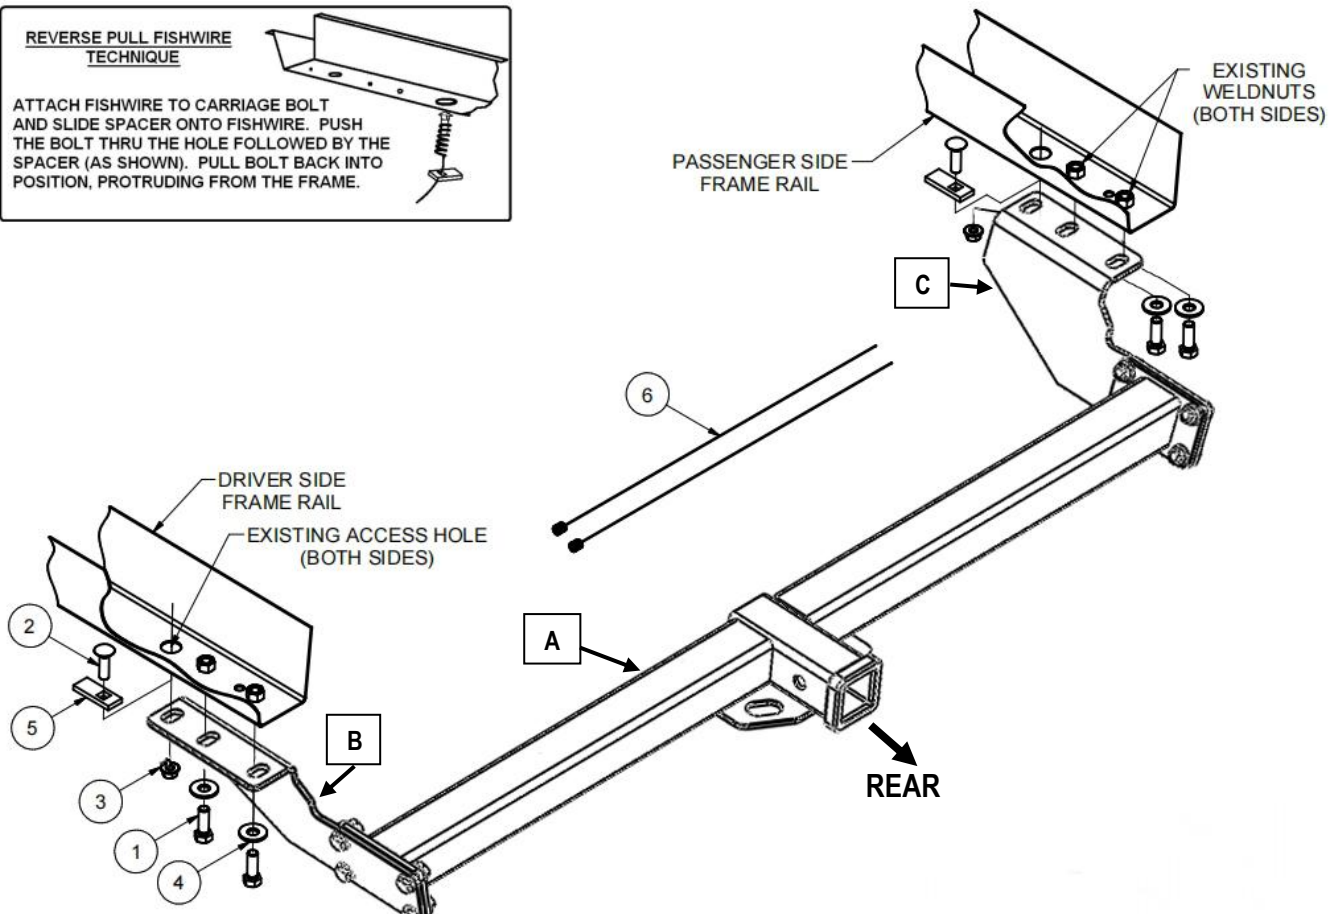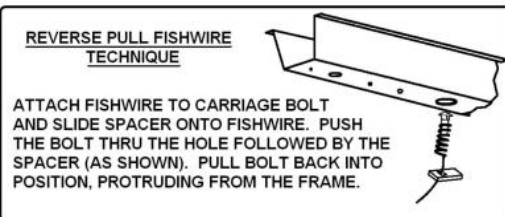




The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

REV.20241201

Part#	HT-X30370	Application	For 2018-2025 Honda Odyssey All
-------	-----------	-------------	---------------------------------

Step	Description
1	<p>If present, remove (6) fasteners ((4) plastic push pins, (1) phillips head screw and (1) hex bolt with 10mm socket) and the plastic underbody panel covering the driver side frame rail. Return fasteners and plastic shield to owner. Remove (2) fasteners on the exhaust deflector and temporarily remove deflector. Note: You may trim panel and re-attach after hitch installation.</p>
	
2	<p>Reverse fishwire (2) M10 carriage bolts and spacers into the existing hole in the bottom of the frame rails leaving the fishwires attached.</p>
	
3	<p>Locate (2) weldnuts near the end of each frame rail. Clean weldnuts of debris and rust to ease hitch installation. (See weldnut cleaning)</p>
	 <div data-bbox="900 1597 1359 1818"><p>WELDNUT CLEANING</p><p>To remove debris from weldnuts in frame, spray lubricant or compressed air into hole. For heavy debris, use a small wire brush. (Be careful not to damage threads).</p></div>

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

REV.20241201

Part#	HT-X30370	Application	For 2018-2025 Honda Odyssey All
4	Raise hitch into position by sliding the passenger side plate over the exhaust first. Secure the hitch into position using M12-1.25 x 35mm bolts and M12 conical washers and M10 flange nuts.		
5	Torque all M12 fasteners to 86 lb-ft and all 10mm fasteners to 47 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

-

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!