



Hitch Installation Instructions

REV.20260601D

Part#	HT-X30423	Application	Acura RDX May interfere with liftgate kick sensor					
-------	-----------	-------------	---	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	4	M12X1.25-40	2#	Conical Washers	4	M12
HW A (For Hitch Assembly)	3#	Hex Bolts	8	M12X1.25-35	5#	Hex Flange Nuts	8	M12X1.25
	4#	Flat Washers	16	M12				


Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

RUBBER ISOLATOR REMOVAL DIAGRAM

This technique can be used if an Exhaust Hanger Removal Pliers is not available.




Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.

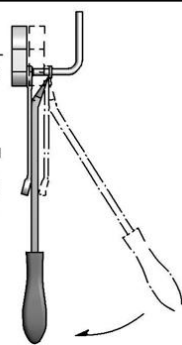

- * Lower Exhaust
- * Lower Spare Tire
- * No Drilling Required


PASSENGER
FRAME RAIL

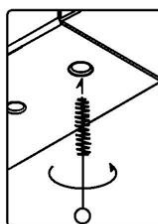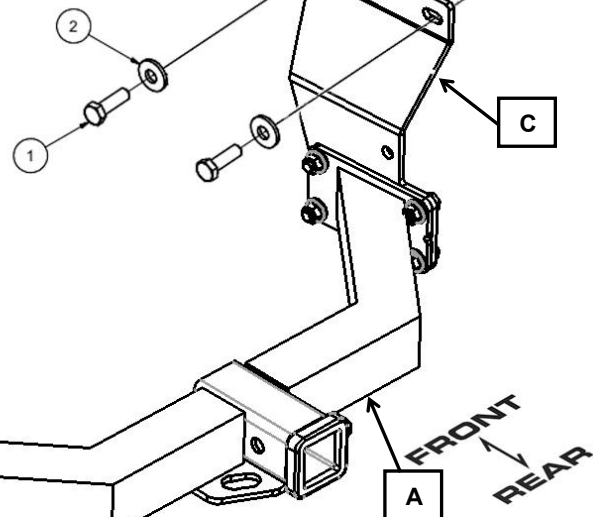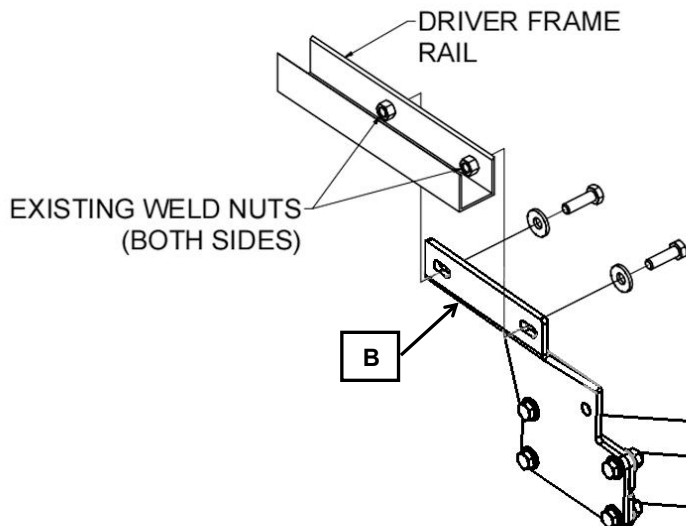

WELDNUT CLEANING

To remove debris from weldnuts in frame, spray lubricant or compressed air into hole. For heavy debris, use a small wire brush. (Be careful not to damage threads).

CONICAL TOOTHED WASHER ORIENTATION DIAGRAM

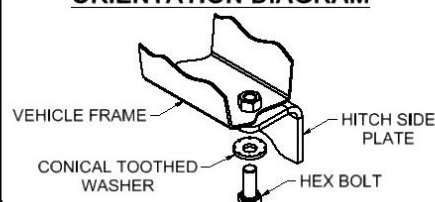

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X30423	Application	Acura RDX May interfere with liftgate kick sensor
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.25-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
NOTE: Hitch may interfere with functionality of liftgate sensor.			
2	Lower spare tire by locating the lowering tools and mechanism. NOTE: Consult vehicle owner manual.		
3	Lower exhaust by locating and removing (2) rearmost rubber exhaust isolators from frame mounted hangers. NOTE: Support exhaust to prevent damage.		
4	Raise hitch into position, secure using provided M12 hardware.		
5	Torque all M12 hardware to 86 ft-lbs.		
6	Reinstall exhaust and spare tire in original vehicle position.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!