



Hitch Installation Instruction

REV.20250901




Part#	HT-X30471	Application	For 2021-2025 Nissan Rogue All
-------	-----------	-------------	--------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	4	M12X1.25-40	2#	Conical Washers	4	M12
HW A (For Hitch Assembly)	3#	Hex Bolts	6	M12X1.75-35	5#	Lock Washers	6	M12
	4#	Flat Washers	10	M12	6#	Hex Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 525 LBS. Tongue Weight.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

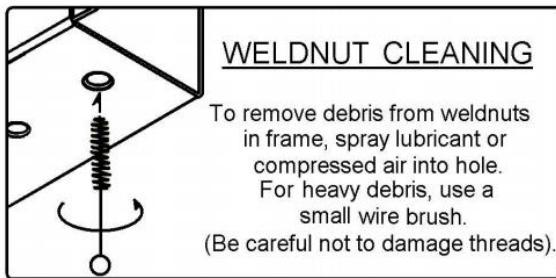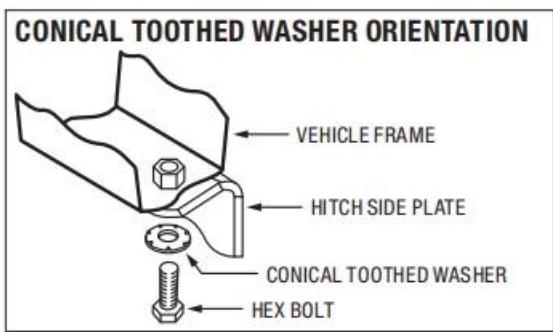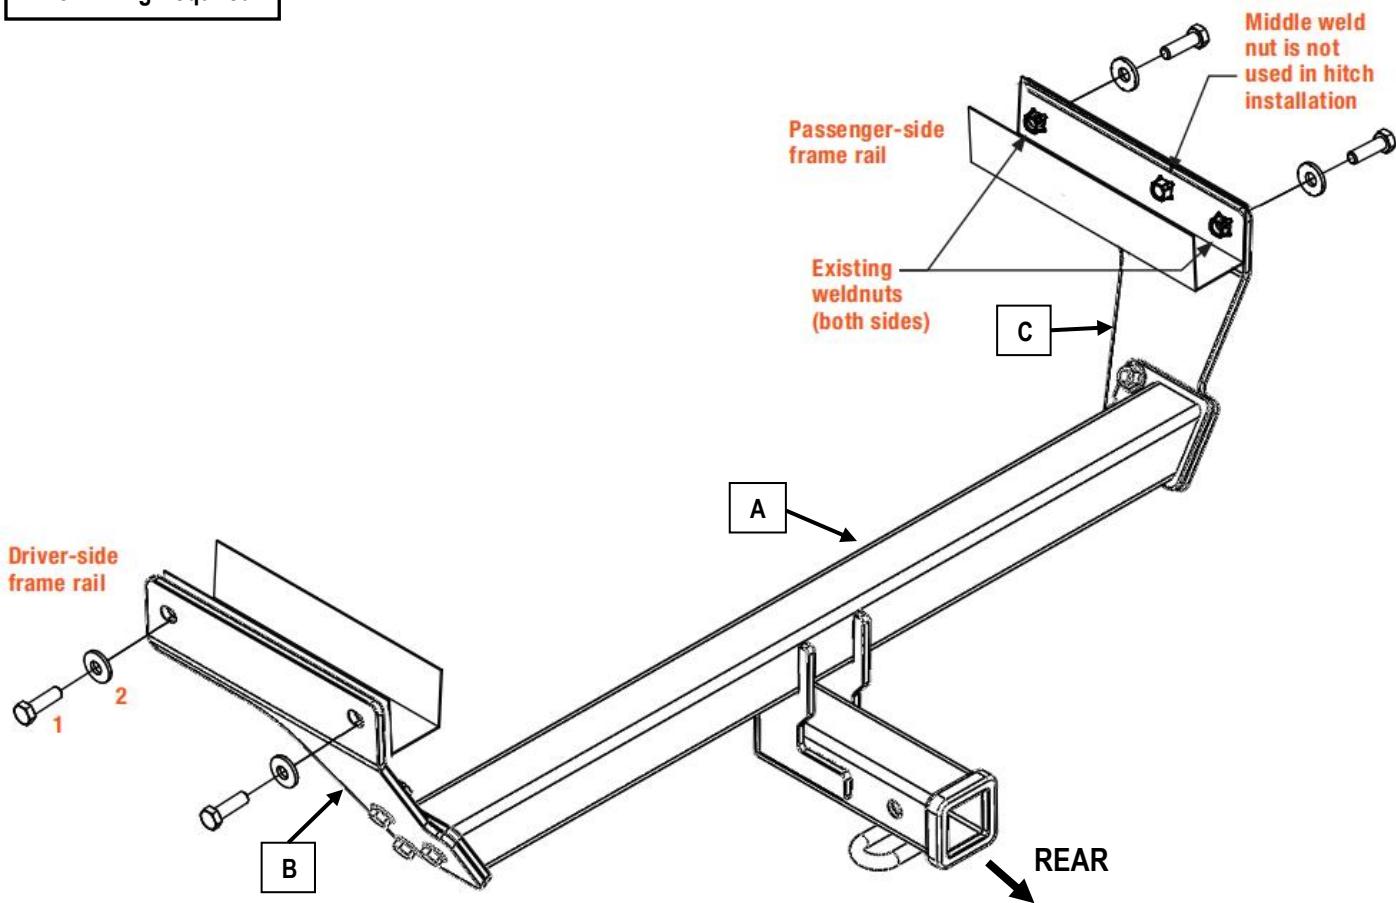

The instruction here is for your reference only. We strongly recommend the professional installer for best result.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

Part#	HT-X30471	Application	For 2021-2025 Nissan Rogue All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35 Hex Bolts, (10) M12 Flat Washers, (6) Lock Washers, (4) M12 Hex Nuts.(Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove the two push fasteners located in the center of the rear bumper fascia for easier installation. Set aside for reinstallation in Step 3.		
	  		
3	Raise the trailer hitch into position by sliding the driver side of the hitch over the tailpipe first, then pulling the rear bumper fascia rearward for more clearance. Align the side plates with the rearmost and forward most holes in the vehicle's frame on both sides. Loosely install the two provided hex bolts and conical washers into the existing weldnuts on both sides. Torque all M12 fasteners to 86 lb-ft and reinstall the two push fasteners removed in Step 2.		
	   		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instruction here is for your reference only. We strongly recommend the professional installer for best result.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!