



Hitch Installation Instructions


REV.20260801S

Part#	HT-X30540	Application	Ford Windstar Van
-------	-----------	-------------	-------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B	1#	Fishwire	1		3#	Carriage Bolts	6	M12X1.75-45
	2#	Spacers	6	With SQ Hole	4#	Hex Flange Nuts	6	M12X1.75
HW A (For Hitch Assembly)	5#	Hex Bolts	8	M12X1.75-35	7#	Hex Flange Nuts	8	M12X1.75
	6#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

- * Drilling Required
- * Must Fishwire Fasteners

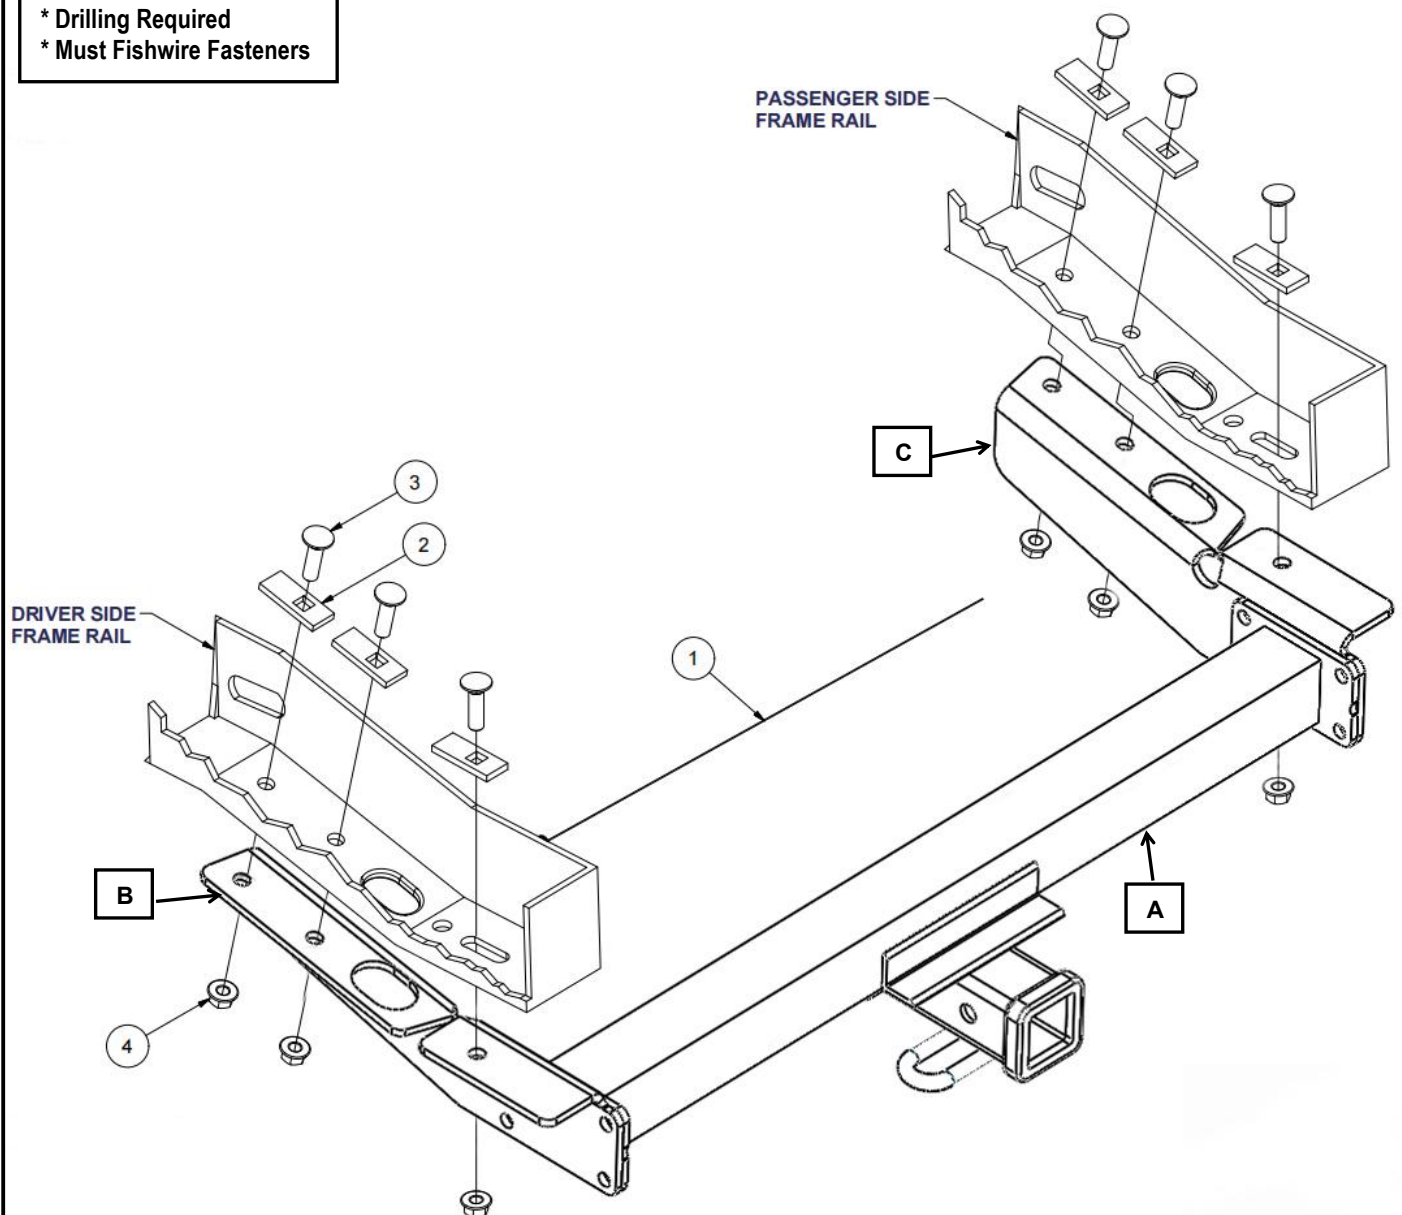

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X30540	Application	Ford Windstar Van
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Torque all “HW A” fasteners to 86 lb-ft.		
2	Fishwire a square hole spacer and carriage bolt through the existing frame slot and down to existing rearward attachment slot as shown.(both sides)		
3	Raise hitch into position and fasten with M12 flange nuts provided.		
4	Using the hitch as a template drill two 1/2" holes per side for additional mounting hardware.		
5	Fishwire square hole spacers and bolts to the drilled locations.		
6	Attach a flange nut to each bolt and torque all HW B (M12) hardware to 58 ft-lbs.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!