AUTO PARTS SPECIALIST INC

Scan for Installation Video

iBoard® Series

INSTALLATION INSTRUCTIONS

PART#: IB-R188/R189

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

These instructions are provided for reference only. We strongly recommend installation by a professional installer for the best results. We are not responsible for any damage caused during installation.

***ROCKER PANEL MOUNT**

***NO DRILLING REQUIRED**

Torque Value


Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	Yes
8mm	16-18	Yes
10mm	31-32	No
12mm	56-58	No
14mm	92-94	No

AUTO PARTS SPECIALIST INC

Scan for Installation Video

Mounting Bracket List			
Item	QTY	Bracket Label	Description
1#	4	DFM	Mounting Bracket for Driver / Passenger Side
2#	4	DFB	Bar Bracket for Driver / Passenger Side

PART LIST

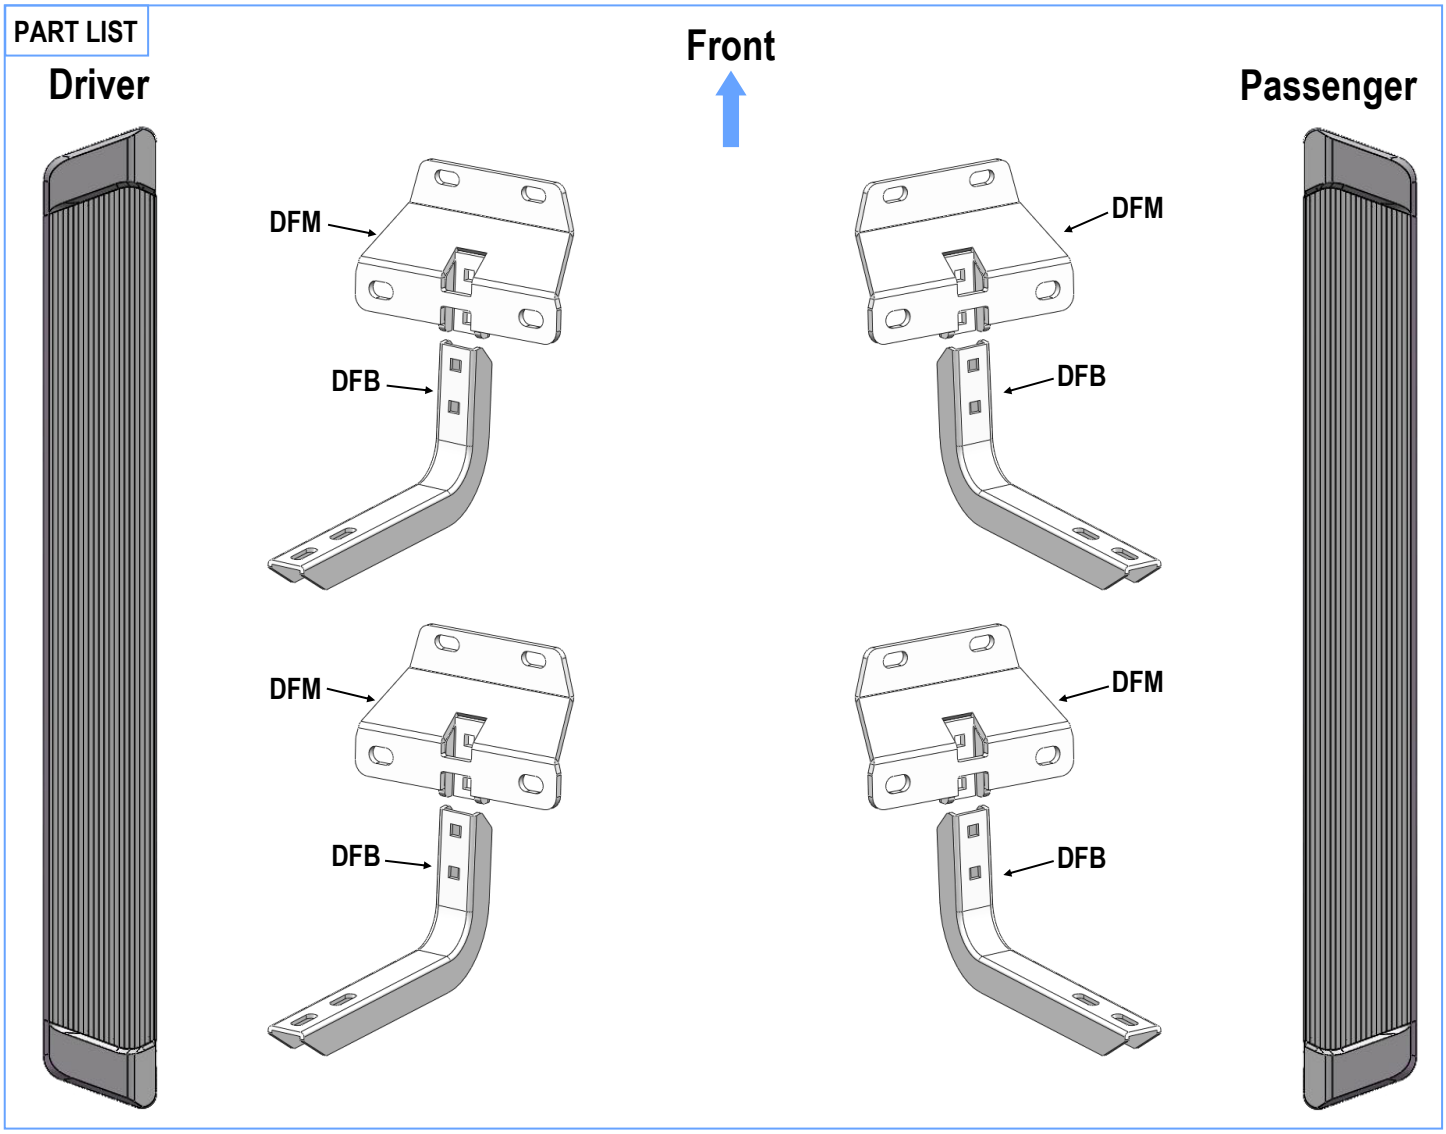

AUTO PARTS SPECIALIST INC

Scan for Installation Video

Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
A1	12	M8 Plastic Washers	A4	8	M8 Flat Washers
A2	8	M8X1.25-25 Carriage Bolts	A5	20	M8X1.25 Nylon Lock Nuts
A3	12	M8 Large Flat washers			



A1 A2 A3 A4 A5

Hardware Package B (For Running Board Installation)					
Item	QTY	Description	Item	QTY	Description
B1	8	M6X1-20mm Square Head Bolts	B3	8	M6 Nylon Lock Nuts
B2	8	M6 Large Flat Washers			




B1 B2 B3


STEP 1: Locate Driver Side Mounting Positions

- Locate the (3) factory studs along the driver side body panel of the vehicle, **(Fig. 1)**.
- Insert (1) A1 (M8 Plastic Washer) onto each thread stud **(Fig. 2)**

NOTE: Use a wire brush to remove paint buildup on the threaded studs before installing brackets.

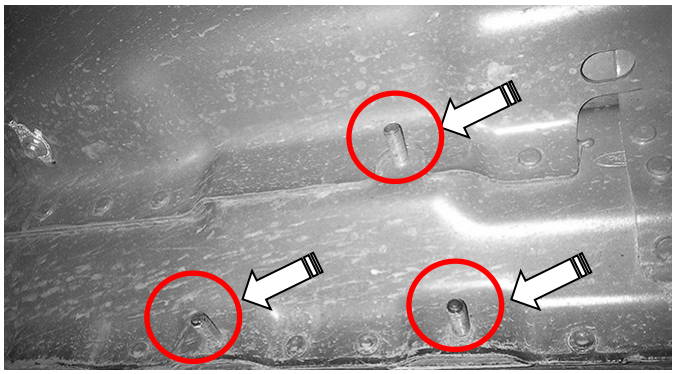

(Fig. 1) Driver Side Mounting Position (Typical)

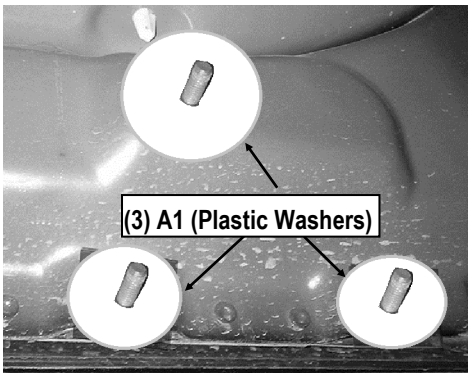


(Fig. 2) Thread Plastic Washers Onto (3) Mounting Studs

STEP 2: Assemble Driver Front Mounting Bracket

Assemble Driver Front Mounting Bracket (**DFM+DFB**) **(Fig. 3)** with:

- (2) A2 (M8X1.25-25 Carriage Bolts)
- (2) A4 (M8 Flat Washers)
- (2) A5 (M8X1.25 Nylon Lock Nuts)

NOTE: Do not fully tighten hardware at this time.

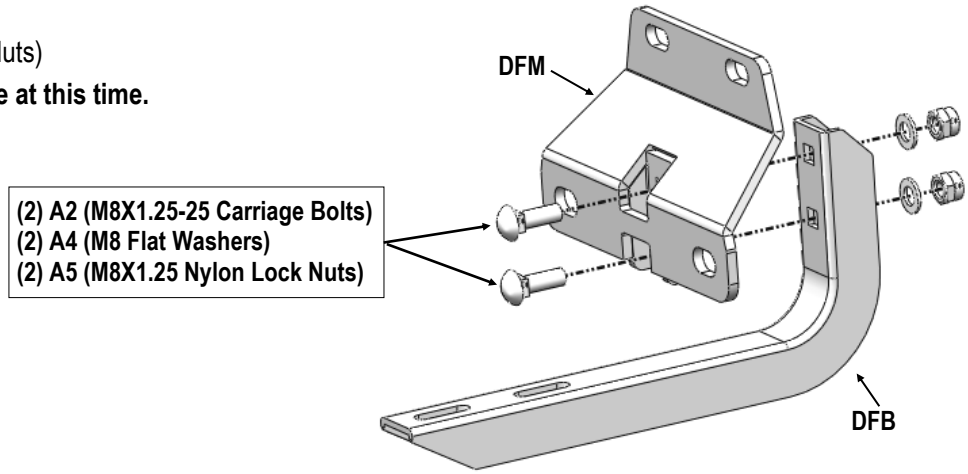


(Fig. 3) Driver Front Mounting Brackets Assembly

STEP 3: Install Driver Side Mounting Bracket

- Attach the assembled Driver Front Mounting Bracket **(DFM+DFB)** to the (3) factory studs with **(Fig. 4)** :
  - (3) A3 (M8 Large Flat Washers)
  - (3) A5 (M8X1.25 Nylon Lock Nuts)
- Repeat the above procedure to install driver rear mounting bracket **(DFM)** at the driver-side rear mounting location.

Note: All (4) DFMs are universal.

Do not fully tighten hardware at this time.

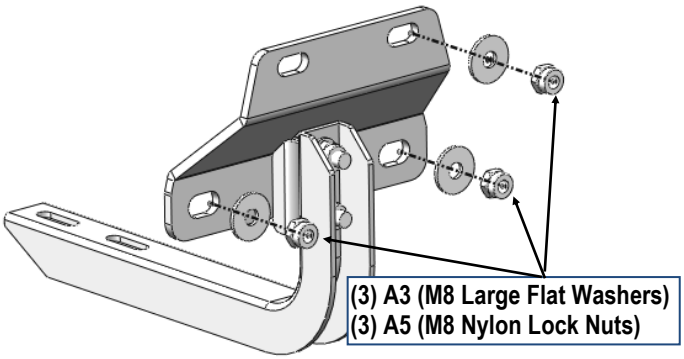

(Fig. 4) Driver Front Mounting Bracket Installation

STEP 4: Driver Side Running Board Installation

Once all (2) mounting brackets are installed, then proceed to the Running Board installation.


(1) Select a Running Board. Slide (2) B1 (M6X1-20mm Square Head Bolts) into each bottom channel **(Fig. 5)**.

(2) Carefully position the Running Board onto the (2) Mounting Brackets.


(3) Attach the Running Board to each Mounting Bracket **(Fig. 6)** with:

- (2) B1 (M6X1-20mm Square Head Bolts)
- (2) B2 (M6 Large Flat Washers)
- (2) B3 (M6 Nylon Lock Nuts)

Note: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged.

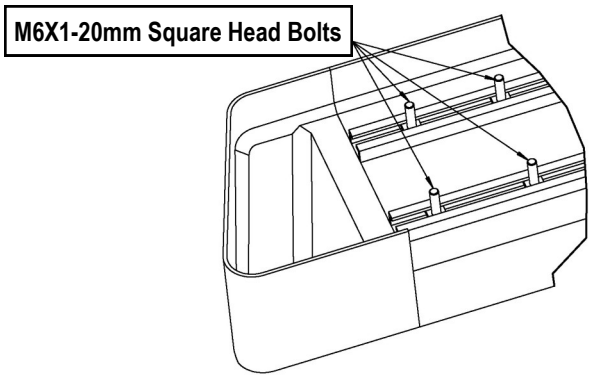

(Fig. 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

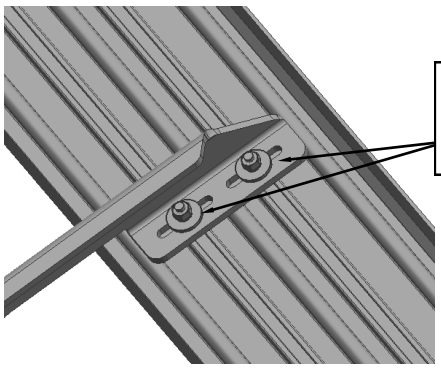

(2) B1 (M6X1-20mm Square Head Bolts)
(2) B2 (M6 Large Flat Washers)
(2) B3 (M6 Nylon Lock Nuts)

(Fig. 6) Running Board Installed Onto Mounting Bracket

STEP 5: Driver Side Running Board Adjustment

- Level and adjust the Running Board properly.
- Tighten all 6mm hardware with 6-7 ft-lbs torque and 8mm hardware with 16-18 ft-lbs torque.

STEP 6: The Other Side Running Board Installation

Repeat **Steps 1-5** for the Other Side Running Board Installation.
And then installation is completed!!!

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.