



iBoard® Series

INSTALLATION INSTRUCTIONS

PART#: IB-R921

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

These instructions are provided for reference only. We strongly recommend installation by a professional installer for the best results. We are not responsible for any damage caused during installation.

***ROCKER PANEL MOUNT**

***NO DRILLING REQUIRED**

Recommended Torque Values

Fastener Size	Tightening Torque (ft-lbs)	Torque Wrench Required (Yes/No)
6mm	6-7	Yes
8mm	16-18	Yes
10mm	31-32	No
12mm	56-58	No
14mm	92-94	No



Scan for
Installation Video



Mounting Bracket List			
Item	QTY	Part Name	Description
1#	8	N/A	Mounting Bracket for Driver / Passenger Side (Universal)

PART LIST



Front



Driver

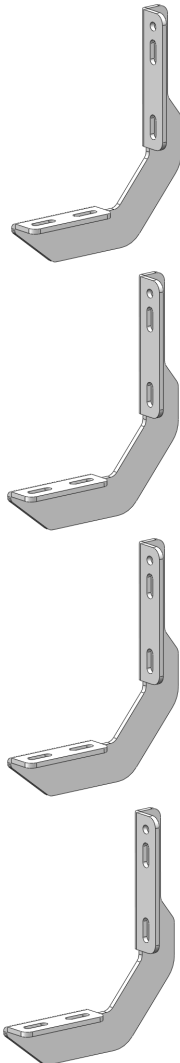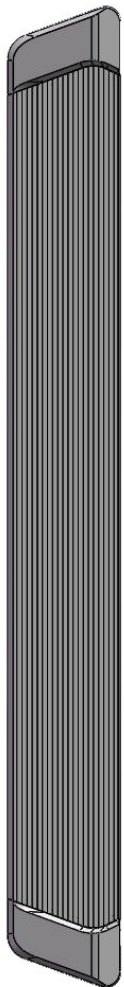

Passenger

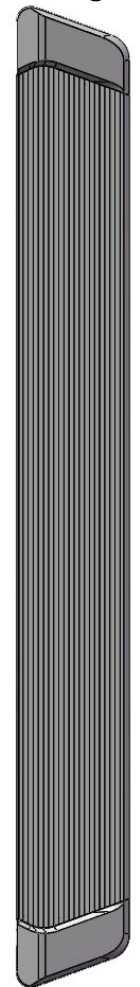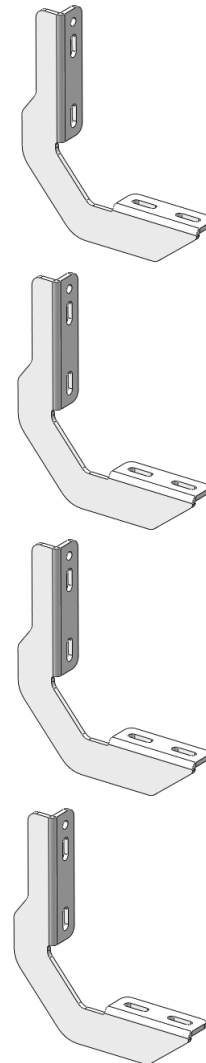



Scan for
Installation Video

Hardware Package A (For Bracket Installation)

Item	QTY	Description	Item	QTY	Description
A1	16	M8X1.25-20mm Hex Bolts	A3	8	M8 Nylon Lock Nuts
A2	24	M8 Flat Washers			



A1



A2



A3



B1



B2




B3



STEP 1: Driver Side Mounting Locations

- Identify the mounting locations along the driver side rocker panel, (Fig 1).

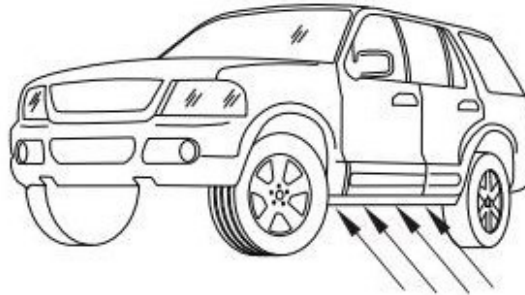

(Fig. 1) Driver Side Front Mounting Locations

STEP 2: Install Driver Front Mounting Brackets


- Attach (1) Mounting Bracket to the upper mounting location with (Fig. 2):

- (1) A1 (M8X1.25-20mm Hex Bolt)
- (1) A2 (M8 Flat Washer)


- Secure the lower hole of the mounting bracket to the rocker panel with: (Fig. 3)

- (1) A1 (M8X1.25-20mm Hex Bolt)
- (2) A2 (M8 Flat Washers)
- (1) A3 (M8 Nylon Lock Nut) **Do not fully tighten hardware at this time.**
- Repeat to install remaining (3) driver side mounting brackets.

Note: All (8) Mounting Brackets are Universal.

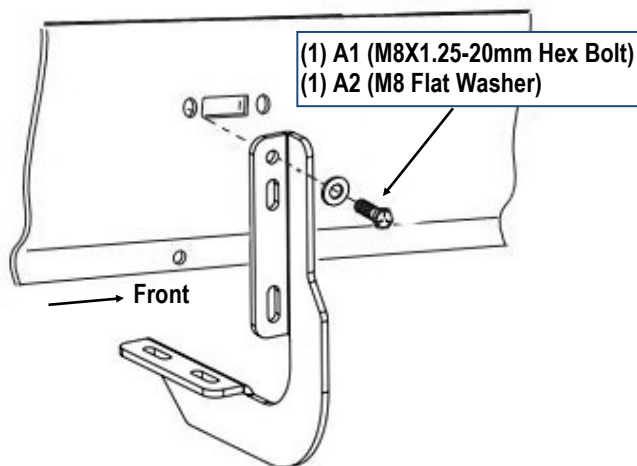

(Fig. 2) Driver Front Mounting Bracket Installed

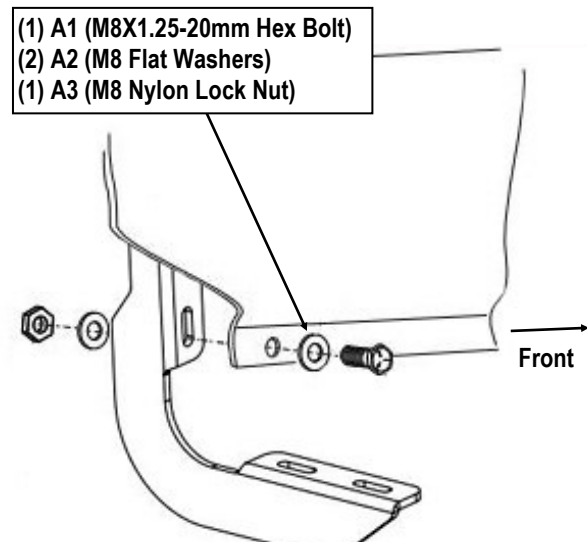

(Fig. 3) Driver Front Mounting Bracket Installed




STEP 3: Driver Running Board Installation

Once all (4) mounting brackets are installed, then proceed to the Running Board installation.


- (1) Select a Running Board. Slide (4) B1 (M6X1-20mm Square Head Bolts) into each bottom channel (**Fig. 4**).
- (2) Carefully position the Running Board onto the (4) Mounting Brackets.
- (3) Attach the Running Board to each Mounting Bracket (**Fig. 5**) with
 - (2) B1 (M6X1-20mm Square Head Bolts)
 - (2) B2 (M6 Large Flat Washers)
 - (2) B3 (M6 Nylon Lock Nuts)

Note: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged.

M6X1-20mm Square Head Bolts

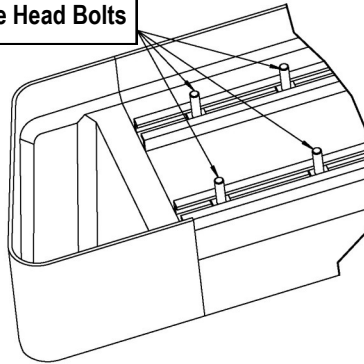

(Fig. 4) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

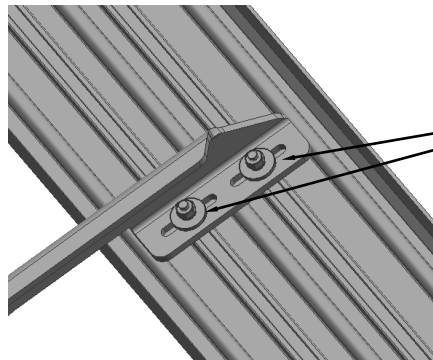

(2) B1 (M6X1-20mm Square Head Bolts)
(2) B2 (M6 Large Flat Washers)
(2) B3 (M6 Nylon Lock Nuts)

(Fig. 5) Running Board Installed Onto Mounting Bracket

STEP 4: Driver Side Running Board Adjustment

- Level and adjust the assembled Running Board properly.
- Tighten all 6mm hardware with 6-7 ft-lbs torque and 8mm hardware with 16-18 ft-lbs torque.



STEP 5: The Other Side Running Board Installation

Repeat Steps 1-4 for the Other Side Running Board Installation.
And then installation is completed!!!

Attention

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.**