AUTO PARTS SPECIALIST INC

Scan for Installation Video

# iBoard® Series

# INSTALLATION INSTRUCTIONS

## PART#: IB-R926

## BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

These instructions are provided for reference only. We strongly recommend installation by a professional installer for the best results. We are not responsible for any damage caused during installation.

***ROCKER PANEL MOUNT**

***NO DRILLING REQUIRED**

## Torque Value


| Fastener Size | Tightening Torque (ft-lbs) | Required |
|---|---|---|
| 6mm | 6-7 | Yes |
| 8mm | 16-18 | Yes |
| 10mm | 31-32 | Yes |
| 12mm | 56-58 | No |
| 14mm | 92-94 | No |

AUTO PARTS SPECIALIST INC

Scan for Installation Video

| Mounting Bracket List | | | | | | | |
|---|---|---|---|---|---|---|---|
| Item | QTY | Bracket Label | Description | Item | QTY | Bracket Label | Description |
| 1# | 1 | DFM | Mounting Bracket for Driver Front | 4# | 1 | PFM | Mounting Bracket for Passenger Front |
| 2# | 1 | DRM | Mounting Bracket for Driver Rear | 5# | 1 | PRM | Mounting Bracket for Passenger Rear |
| 3# | 2 | DFB | Bar Bracket for Driver Front/ Passenger Rear | 6# | 2 | PFB | Bar Bracket for Passenger Front/ Driver Rear |


PART LIST

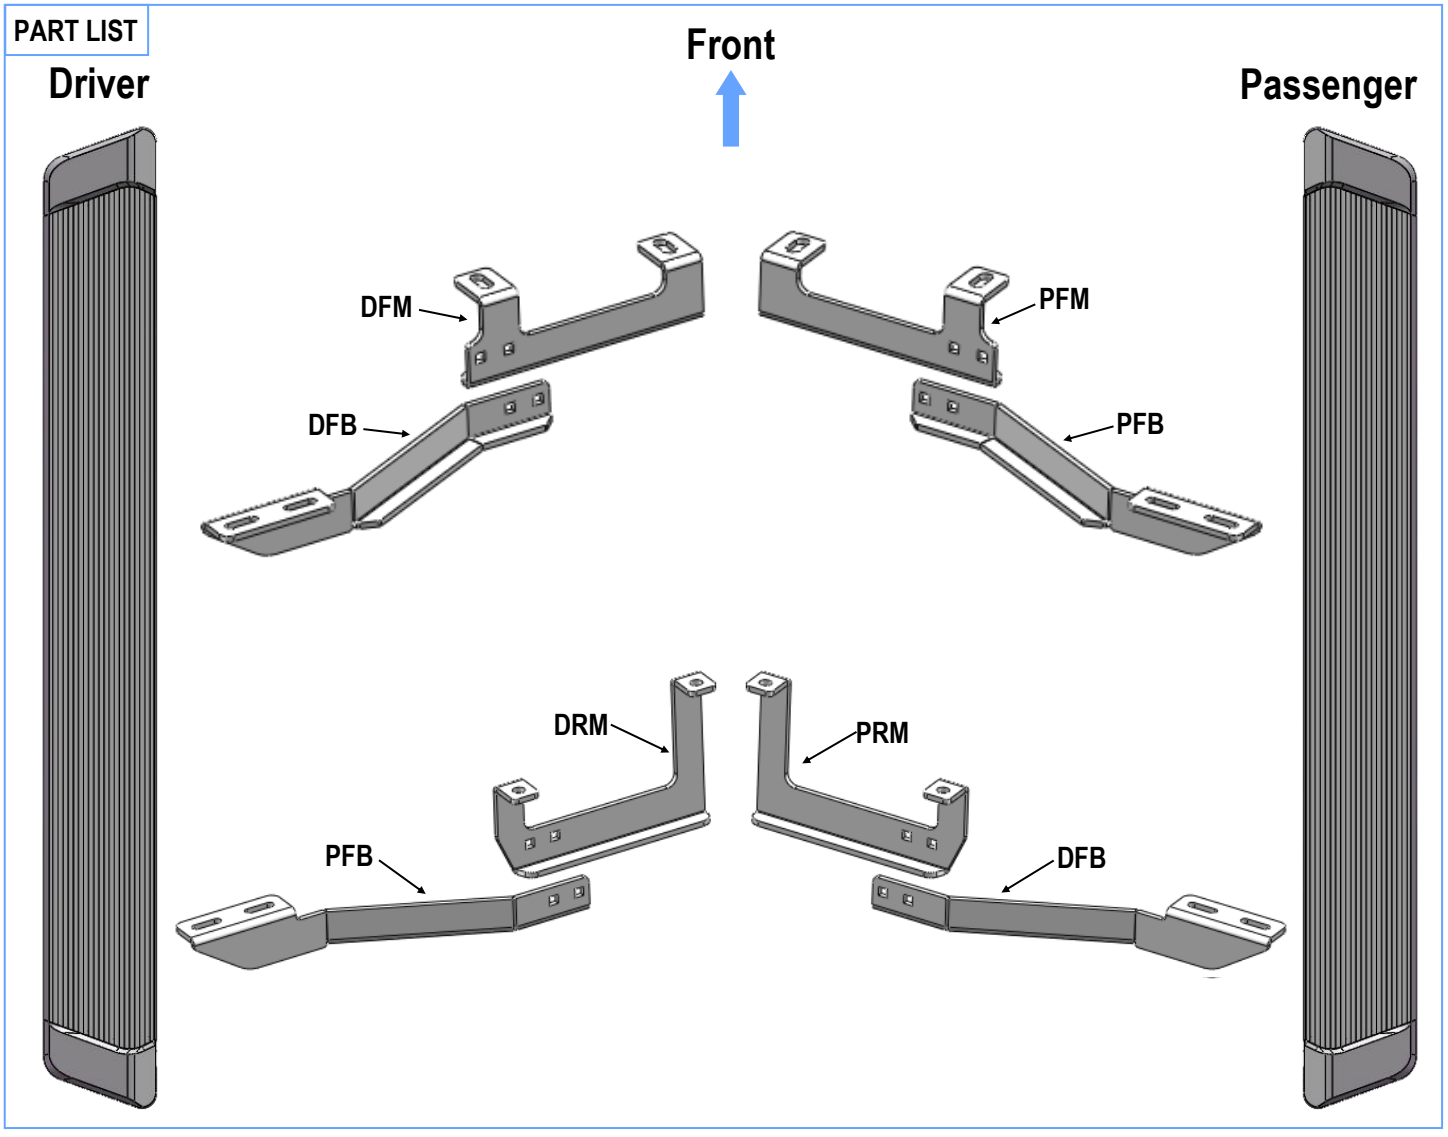

AUTO PARTS SPECIALIST INC

Scan for Installation Video

| Hardware Package A (For Bracket Installation) | | | | | |
|---|---|---|---|---|---|
| Item | QTY | Description | Item | QTY | Description |
| A1 | 2 | M10 T-Bolts | A6 | 4 | M10X1.5 Hex Nuts |
| A2 | 2 | M10X1.5 J-Bolts | A7 | 8 | M8X1.25-25 Carriage Bolts |
| A3 | 4 | M10 Plastic Washers | A8 | 8 | M8 Flat Washers |
| A4 | 4 | M10 Flat Washers | A9 | 8 | M8 Nylon Lock Nuts |
| A5 | 4 | M10 Lock Washers | | | |

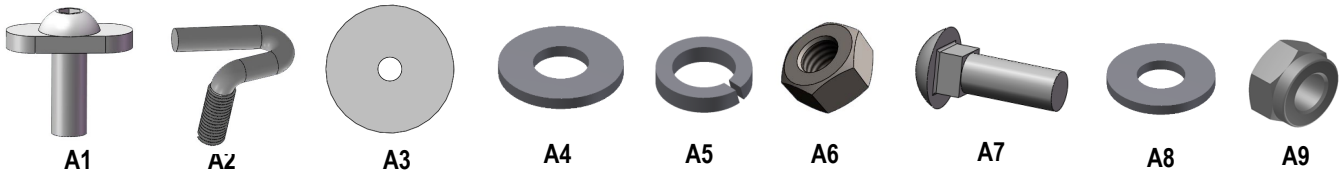

A1 A2 A3 A4 A5 A6 A7 A8 A9

| Hardware Package B (For Running Board Installation) | | | | | |
|---|---|---|---|---|---|
| Item | QTY | Description | Item | QTY | Description |
| B1 | 8 | M6X1-20mm Square Head Bolts | B3 | 8 | M6 Nylon Lock Nuts |
| B2 | 8 | M6 Large Flat Washers | | | |




B1 B2 B3

AUTO PARTS SPECIALIST INC


Scan for Installation Video

## STEP 1: Locate Driver Side Mounting Positions

- Remove the plastic cover under the body floor if equipped at the driver side front of the vehicle, **(Fig. 1)**.
- Insert (1) A2 (M10 J-Bolt) into inner hole, and use a A3 (M10 Plastic Washer) to hold in place.
- Insert (1) A1 (M10 T-Bolt) into outer hole and use a A3 (M10 Plastic Washer) to hold in place, **(Fig. 2).**
- **NOTE: Use a wire brush to remove paint buildup on the threaded studs before installing brackets.**

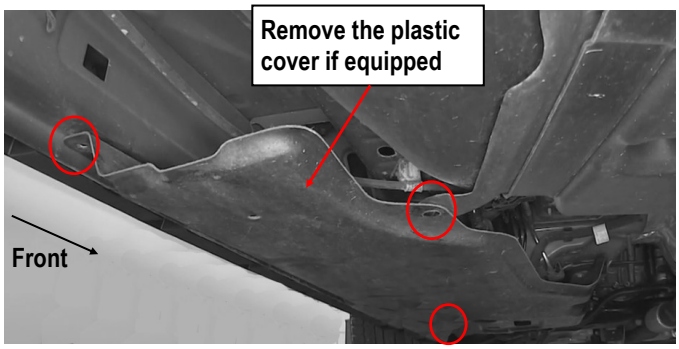


**(Fig. 1) Remove the plastic cover if equipped (On Driver Side Front Mounting Location)**

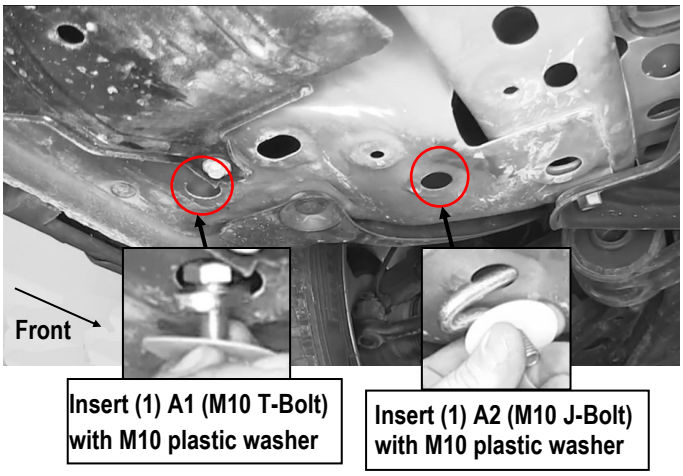



**(Fig. 2) Driver Side Front Mounting Location**

## STEP 2: Assemble Driver Front and Rear Mounting Brackets


- Assemble Driver Front Mounting Bracket (**DFM+DFB**) **(Fig. 3)** with:
  - (2) A7(M8X1.25-25 Carriage Bolts)
  - (2) A8 (M8 Flat Washers)
  - (2) A9 (M8X1.25 Nylon Lock Nuts)

**NOTE: Do not fully tighten hardware at this time.**

- Repeat to assemble driver rear mounting bracket **(DRM+PFB).**

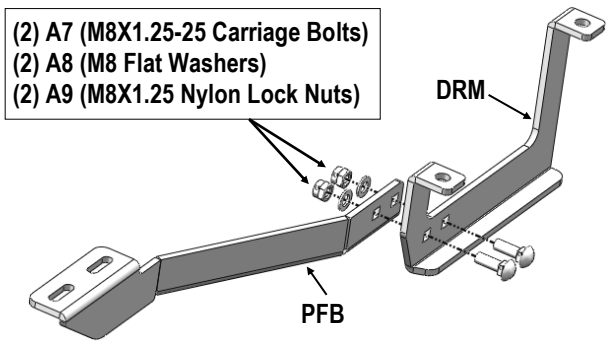


**(Fig. 4) Driver Front Mounting Brackets Assembly**

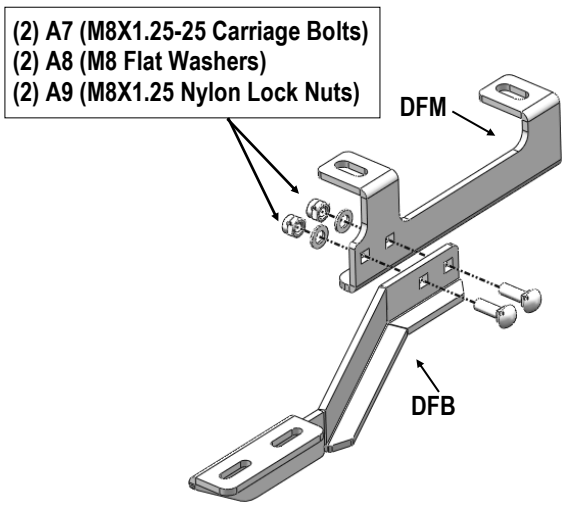



**(Fig. 3) Driver Front Mounting Brackets Assembly**


## STEP 3: Install Driver Front Mounting Bracket

- Attach the assembled Driver Front Mounting Bracket **(DFM+DFB)** to the installed M10 J-Bolt and M10-T Bolt with **(Figs. 5-6)**:
  - (2) A4 (M10 Flat Washers)
  - (2) A5 (M10 Lock Washers)
  - (2) A6 (M10 Hex Nuts)

**Note: Do not fully tighten hardware at this time.**

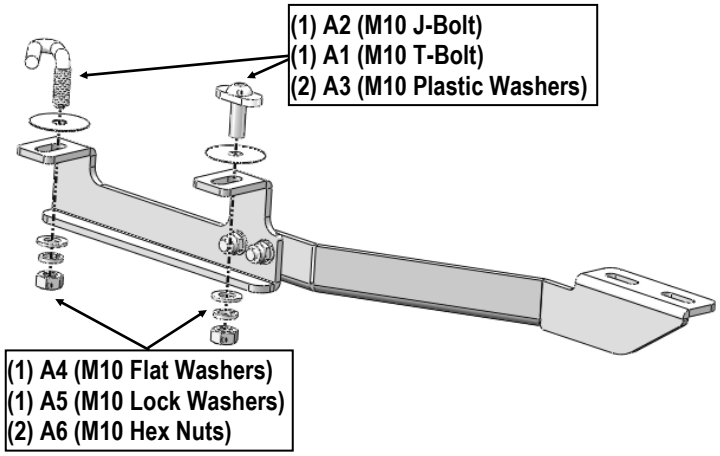


(Fig. 5) Driver Front Mounting Bracket Installation

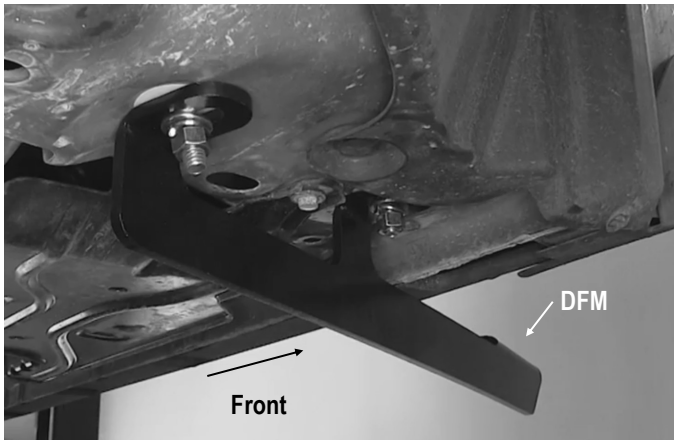



(Fig. 6) Driver Front Mounting Bracket Installed (Example Only)


## STEP 4: Install Driver Rear Mounting Bracket

- Move to the driver side rear mounting location.
- Remove the (2) factory bolts from the rear suspension bracket **(Fig. 7).**
- Slide the assembled rear mounting bracket into place and secure reusing factory bolts **(Fig. 8).**

**Note: Don't fully tighten at this time.**

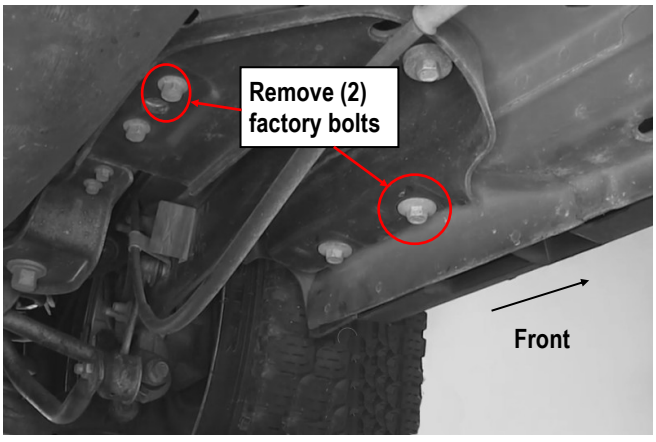


(Fig. 7) Driver Side Rear Mounting Location

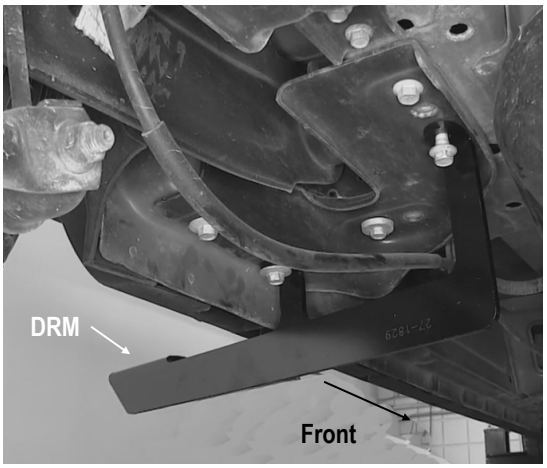


(Fig. 8) Driver Rear Mounting Bracket Installed (Example Only)

## STEP 5: Driver Side Running Board Installation

Once all (2) mounting brackets are installed, then proceed to the Running Board installation.


(1) Slide (2) B1 M6X1-20mm Square Head Bolts into each of the two bottom channels (4 bolts total per Running Board) **(Fig. 9)**.

(2) Carefully position the Running Board onto the (2) Mounting Brackets.


(3) Attach the Running Board to each Mounting Bracket **(Fig. 10)** with:

- (2) B1 (M6X1-20mm Square Head Bolts)
- (2) B2 (M6 Large Flat Washers)
- (2) B3 (M6 Nylon Lock Nuts)

**Note: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged.**

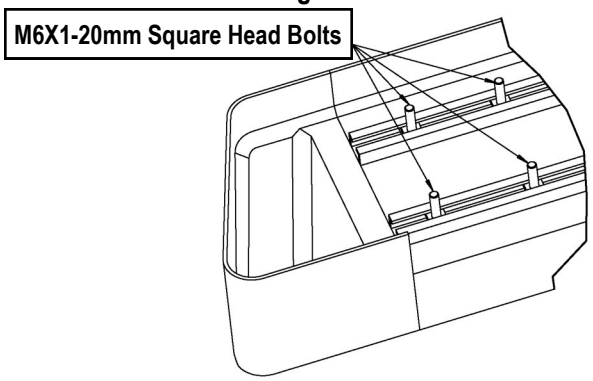


**(Fig. 9) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels**

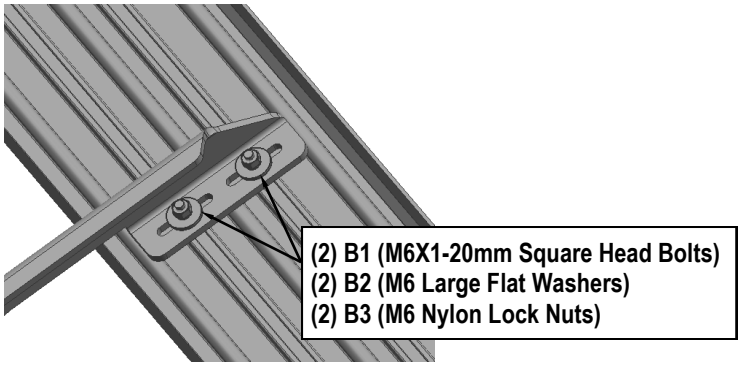


**(Fig. 10) Running Board Installed Onto Mounting Bracket**

## STEP 6: Driver Side Running Board Adjustment

- Level and adjust the Running Board properly.
- Tighten all 6mm hardware with 6-7 ft-lbs torque, 8mm hardware with 16-18 ft-lbs torque and 10mm hardware with 31-32 ft-lbs torque.

## STEP 7: The Other Side Running Board Installation

Repeat **Steps 1-6** on the passenger side using the corresponding passenger-side brackets (PFM+PFB for front, PRM+DFB for rear). And then installation is complete!!!

**Attention**

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.**

**In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.**