



iBoard® Series

INSTALLATION INSTRUCTIONS

PART#: IB-R009

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

These instructions are provided for reference only. We strongly recommend installation by a professional installer for the best results. We are not responsible for any damage caused during installation.

***ROCKER PANEL MOUNT**

***NO DRILLING REQUIRED**

Recommended Torque Values

Fastener Size	Tightening Torque (ft-lbs)	Torque Wrench Required (Yes/No)
6mm	6-7	Yes
8mm	16-18	Yes
10mm	31-32	No
12mm	56-58	No
14mm	92-94	No



Scan for
Installation Video




Mounting Bracket List			
Item	QTY	Bracket Label	Description
1#	2	DFM	Mounting Bracket for Driver / Passenger Front
2#	2	DRM	Mounting Bracket for Driver / Passenger Rear
3#	2	DRB	Bar Bracket for Driver / Passenger Rear

PART LIST

Driver

Front

Passenger

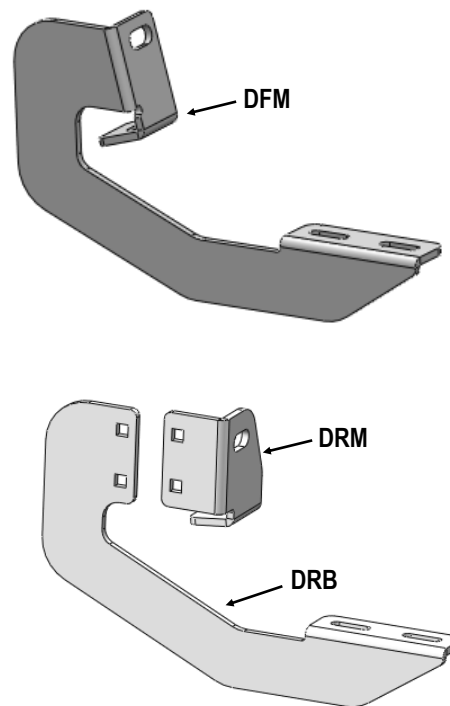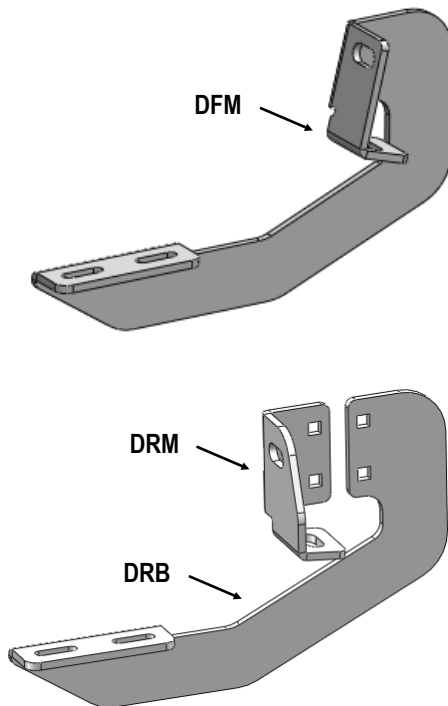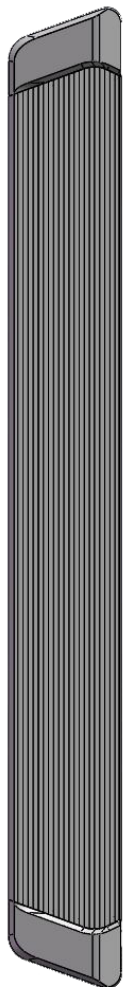





Scan for
Installation Video

Hardware Package A (For Bracket Installation)

Item	QTY	Description	Item	QTY	Description
A1	8	M8X1.25-30mm Hex Bolts	A5	8	M8 Lock Washers
A2	4	M8X1.25-25mm Carriage Bolts	A6	4	M8 Hex Nuts
A3	12	M8 Large Flat Washers	A7	4	M8 Nylon Lock Nuts
A4	4	M8 Flat Washers	A8	4	M8 Clip Nuts



A1



A2



A3



A4




A5



A6




A7



A8

Hardware Package B (For Running Board Installation)

Item	QTY	Description	Item	QTY	Description
B1	8	M6X1-20mm Square Head Bolts	B3	8	M6 Nylon Lock Nuts
B2	8	M6 Large Flat Washers			



B1



B2




B3



STEP 1: Assemble Rear Mounting Brackets

- Assemble Rear Mounting Bracket (**DRM+DRB**) (Fig. 1) with:
 - (2) A2 (M8X1.25-25 Carriage Bolts)
 - (2) A4 (M8 Flat Washers)
 - (2) A7 (M8X1.25 Nylon Lock Nuts)

(2) A2 (M8X1.25-25 Carriage Bolts)
(2) A4 (M8 Flat Washers)
(2) A7 (M8 Nylon Lock Nuts)

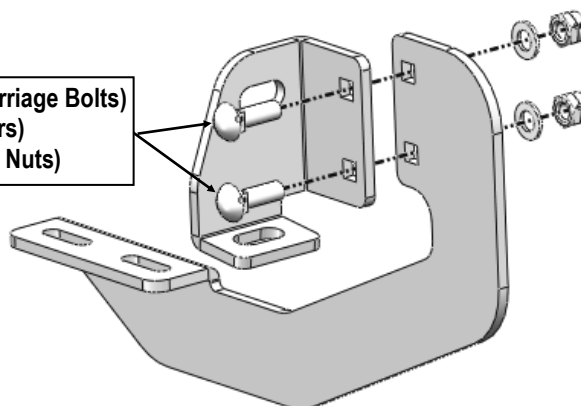


(Fig. 1) Rear Mounting Bracket Assembly


STEP 2: Locate Driver Side Mounting Locations

- Remove the large oval rubber cover located on the inner side panel toward the front, (Fig. 2).
- Insert (1) A8 (M8 Clip Nut) into the round hole (Fig. 3).

NOTE: Threaded nut must go towards the inside of the side panel.

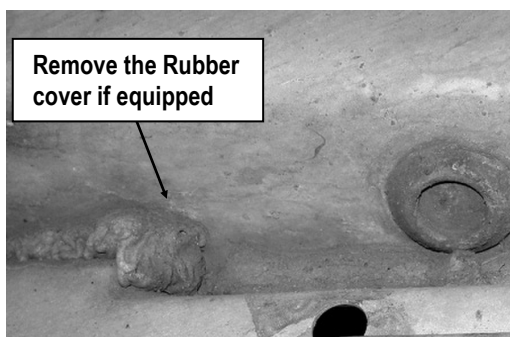

(Fig. 2) Driver Side Front Mounting Location (Typical)

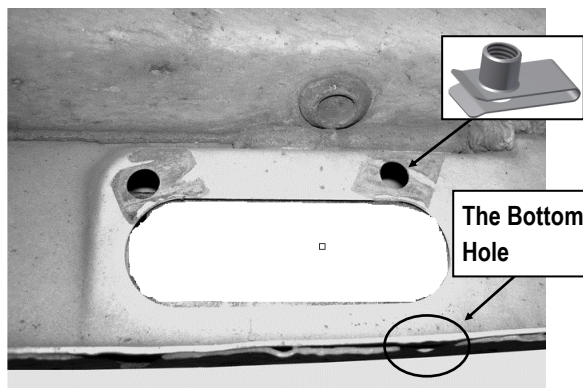


(Fig. 3) Insert M8 Clip Nut into the Round Hole




STEP 3: Install Driver Front Mounting Bracket

- Attach (1) Driver Front Mounting Bracket (**DFM**) to the installed M8 Clip Nut on driver side front of the vehicle with (**Fig. 4**). :
 - (2) A1 (M8X1.25-30mm Hex Bolts)
 - (3) A3 (M8 Large Flat Washers)
 - (2) A5 (M8 Lock Washers)
 - (1) A6 (M8 Hex Nuts)

Do not fully tighten hardware at this time.
- Repeat to install the assembled Driver Rear Mounting Bracket (**Fig. 5**).

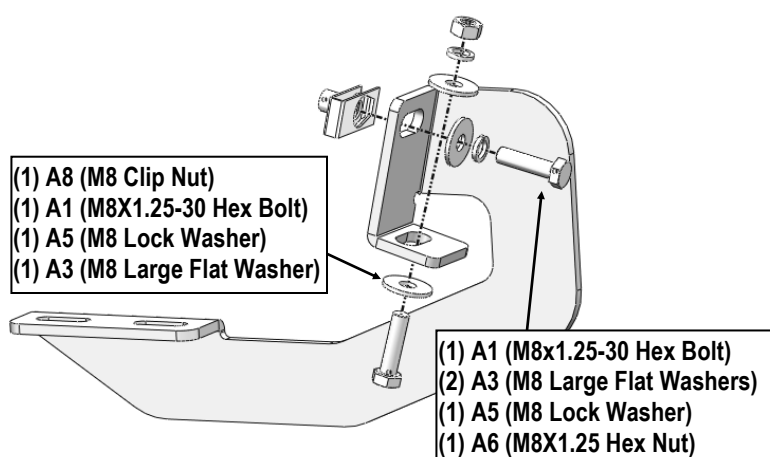

(Fig. 4) Driver Front Mounting Bracket Installation

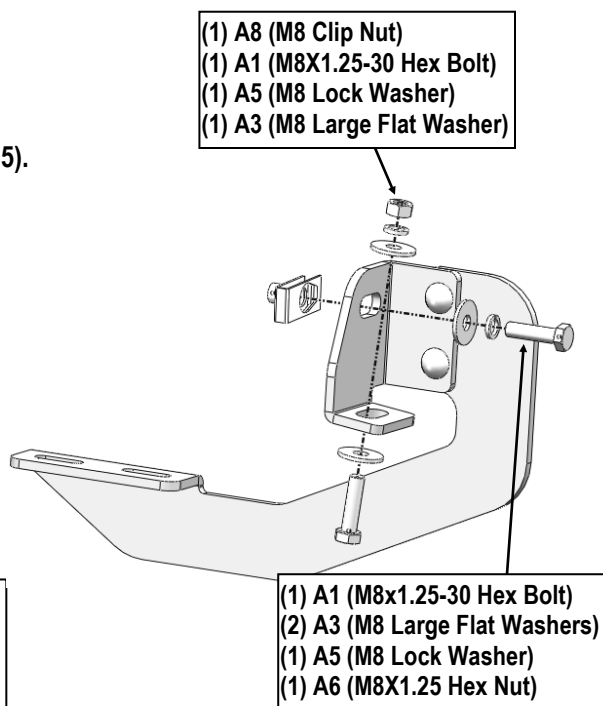

(Fig. 5) Driver Rear Mounting Bracket Installation

STEP 4: Driver Side Running Board Installation


Once all (2) mounting brackets are installed, then proceed to the Running Board installation.

- (1) Select a Running Board. Slide (2) B1 (M6X1-20mm Square Head Bolts) into each bottom channel (**Fig. 6**).
- (2) Carefully position the Running Board onto the (2) Mounting Brackets.
- (3) Attach the Running Board to each Mounting Bracket (**Fig. 7**) with
 - (2) B1 (M6X1-20mm Square Head Bolts)
 - (2) B2 (M6 Large Flat Washers)
 - (2) B3 (M6 Nylon Lock Nuts)


Note: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged.



M6X1-20mm Square Head Bolts

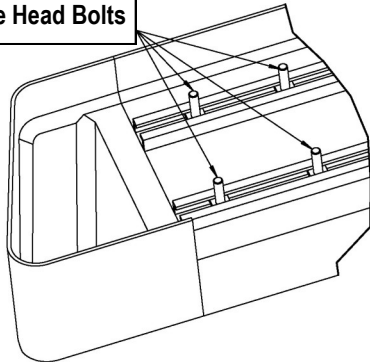

(Fig. 6) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

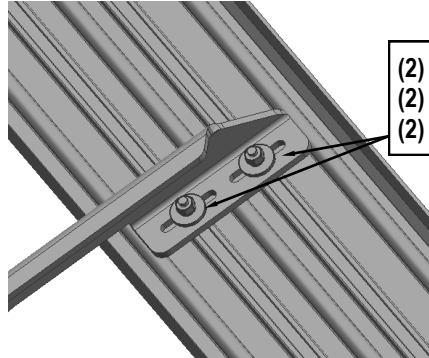

(2) B1 (M6X1-20 Square Head Bolts)
(2) B2 (M6 Large Flat Washers)
(2) B3 (M6 Nylon Lock Nuts)

(Fig. 7) Running Board Installed Onto Mounting Bracket

STEP 5: Driver Side Running Board Adjustment

- Level and adjust the assembled Running Board properly.
- Tighten all 6mm hardware with 6-7 ft-lbs torque and 8mm hardware with 16-18 ft-lbs torque.

STEP 6: The Other Side Running Board Installation

Repeat **Steps 1-5** for the Other Side Running Board Installation. And then installation is completed!!!

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.