AUTO PARTS SPECIALIST INC

Scan for Installation Video

iBoard® Series

INSTALLATION INSTRUCTIONS

PART#: IB-R097/R098

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

These instructions are provided for reference only. We strongly recommend installation by a professional installer for the best results. We are not responsible for any damage caused during installation.


***ROCKER PANEL MOUNT**
***NO DRILLING REQUIRED**

Torque Value

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	Yes
8mm	16-18	Yes
10mm	31-32	No
12mm	56-58	No
14mm	92-94	No

Mounting Bracket List			
Item	**QTY**	**Bracket Label**	**Description**
1#	2	DFM	Mounting Bracket for Driver / Passenger Front
2#	6	DRM	Mounting Bracket for Driver /Passenger Center /Rear

PART LIST

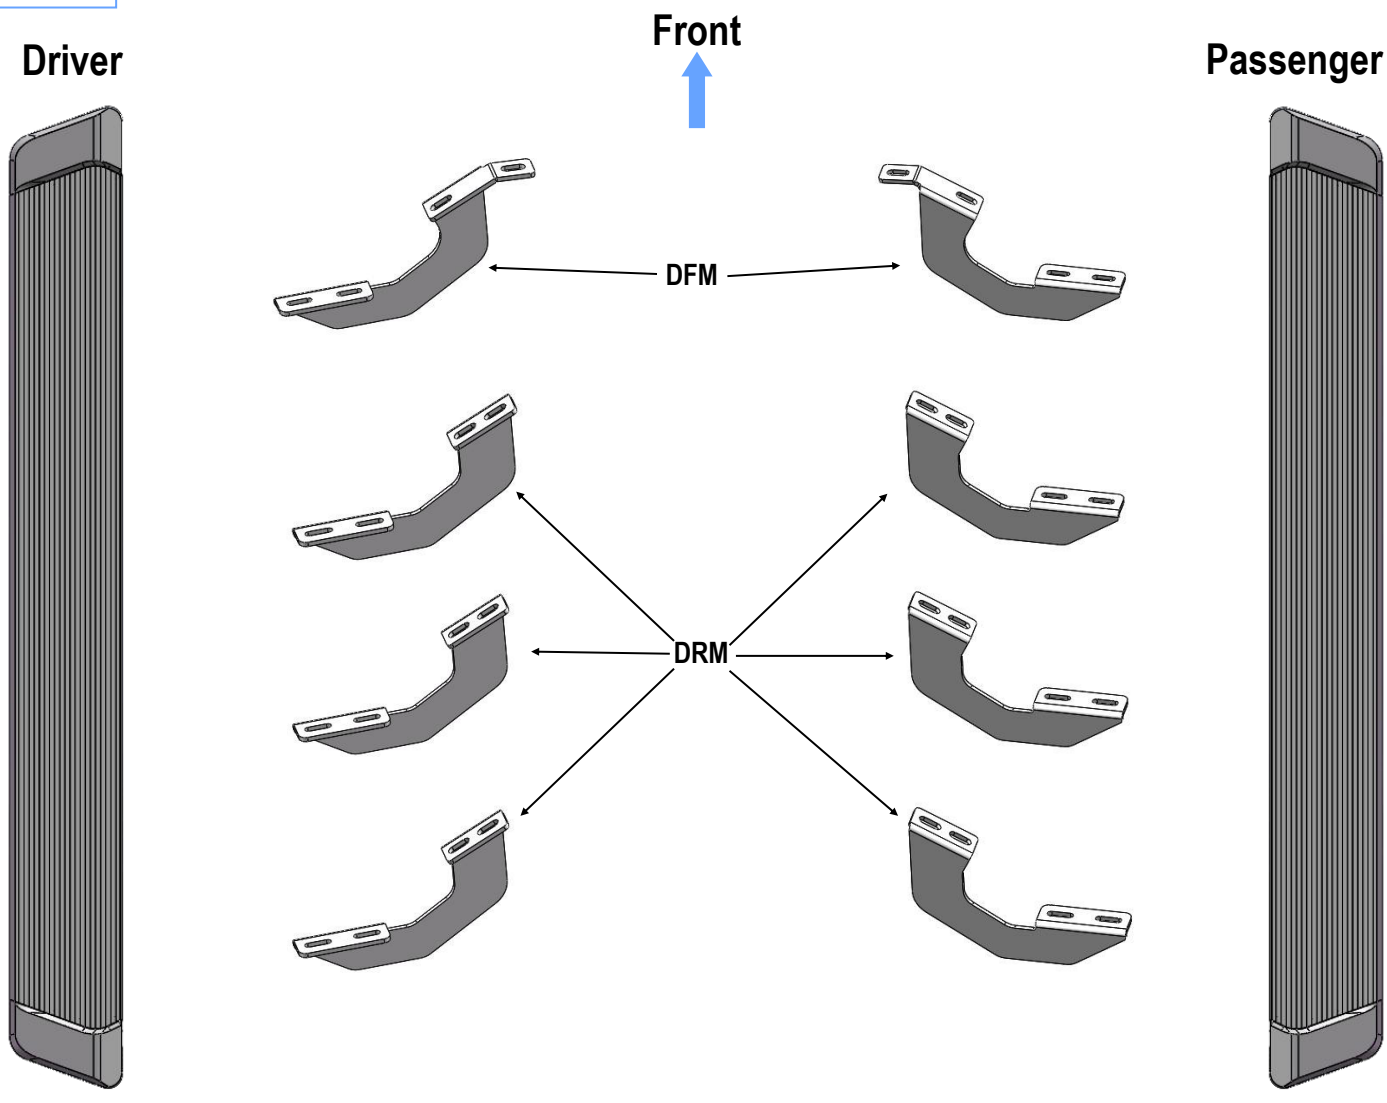

Scan for Installation Video

Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
A1	16	M8X1.25-30mm Hex Bolts	A3	16	M8 Lock Washers
A2	16	M8 Large Flat Washers			



A1




A2



A3

Hardware Package B (For Running Board Installation)					
Item	QTY	Description	Item	QTY	Description
B1	16	M6X1-20mm Square Head Bolts	B3	16	M6 Nylon Lock Nuts
B2	16	M6 Large Flat Washers			



B1



B2



B3

STEP 1: Install the Driver Side Mounting Brackets

(1) Start installation from the driver side of the vehicle.


(2) Bolt the Driver Front Mounting Bracket (**DFM**) to the factory threaded holes on the Driver Side Front Mounting Position **(Fig. 1)** with:

- (2) A1 (M8X1.25-30mm Hex Bolts)
- (2) A2 (M8 Large Flat Washers)
- (2) A3 (M8 Lock Washers)

(3) Move to the driver side center and rear mounting locations. Repeat to install the Driver Center & Rear Mounting Brackets **(Fig. 1)**.

NOTE: The three Driver Center/Rear Mounting Brackets (DRM) are identical and interchangeable.

Do not fully tighten hardware at this time.

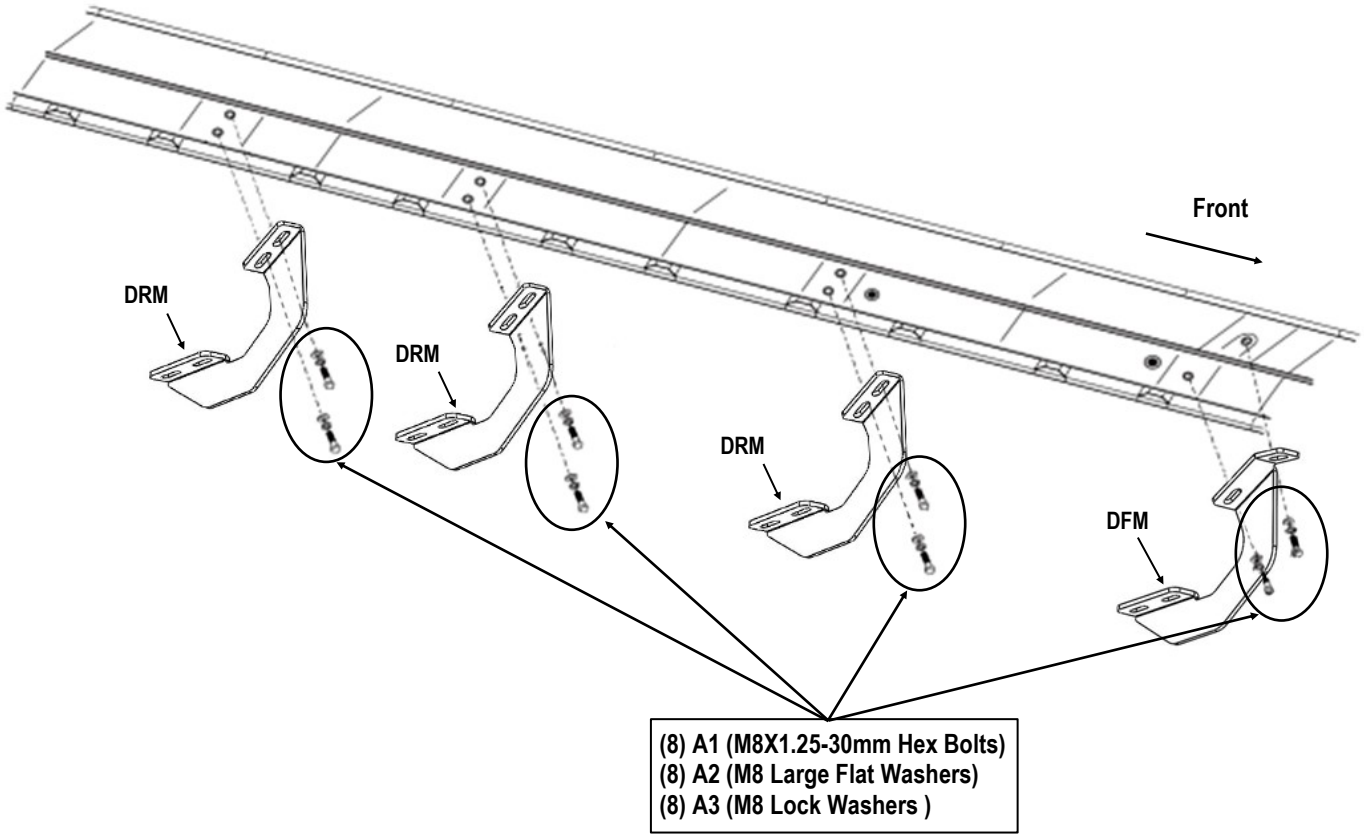

(Fig. 1) Driver Side Mounting Bracket Installation

STEP 2: Driver Side Running Board Installation


Once all (4) mounting brackets are installed, then proceed to the Running Board installation.

(1) Slide (4) B1 M6×1-20mm Square Head Bolts into each of the two bottom channels (8 bolts total per Running Board) **(Fig. 2).** Carefully position the Running Board onto the (4) Mounting Brackets.


(2) Attach the Running Board to each Mounting Bracket **(Fig. 3)** with

- (2) B1 (M6X1-20mm Square Head Bolts)
- (2) B2 (M6 Large Flat Washers)
- (2) B3 (M6 Nylon Lock Nuts)

Note: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged.

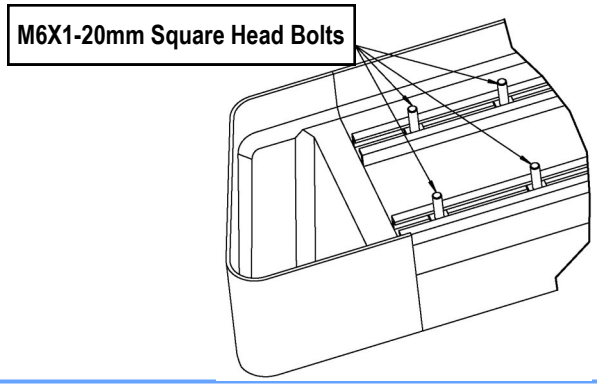

(Fig. 2) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

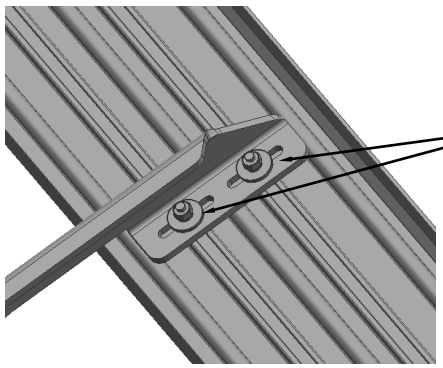

(Fig. 3) Running Board Installed Onto Mounting Bracket

STEP 3: Driver Side Running Board Adjustment

- Level and adjust the assembled Running Board properly.
- Tighten all 6mm hardware with 6-7 ft-lbs torque and 8mm hardware with 16-18 ft-lbs torque.

STEP 4: Passenger Side Running Board Installation

Repeat **Steps 1-3** for Passenger Side Running Board Installation.
And then installation is completed!!!

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.