# iBoard®

iBoard® by APS

PART#: IB-258A&B

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

Item	QTY	Description	Item	QTY	Description
1#	6	Mounting Brackets	4#	12	M6X1-20mm Square Head Bolts
2#	12	M8 Large Flat Washers	5#	12	M6 Large Flat Washers
3#	12	M8X1.25 Nylon Lock Nuts	6#	12	M6X1 Nylon Lock Nuts
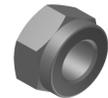
2 #   3 #   4 #   5 #   6 #

iBoard®

Driver

Front

Passenger

1#

1#

1#

1#

1#

1#
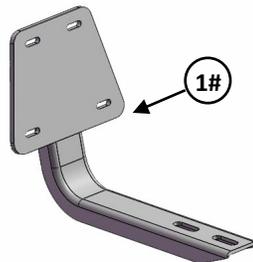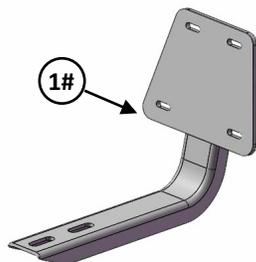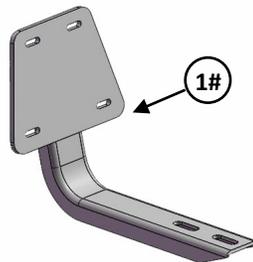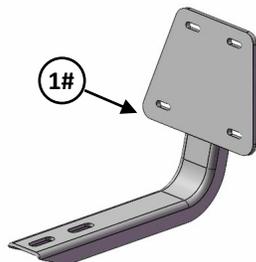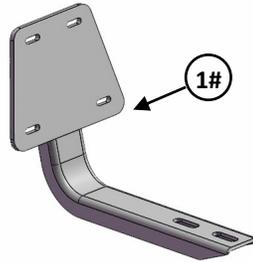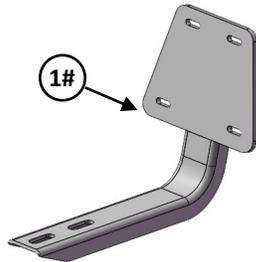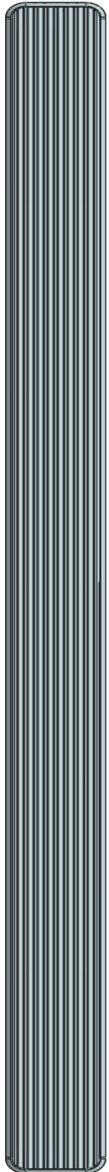
STEP 1

Start the installation under the driver side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, **(Fig 1-3)**. <u>NOTE:</u> Chase threads on the studs first before installing Brackets to remove paint buildup. <u>**Only two studs could be used on each mounting location.**</u>
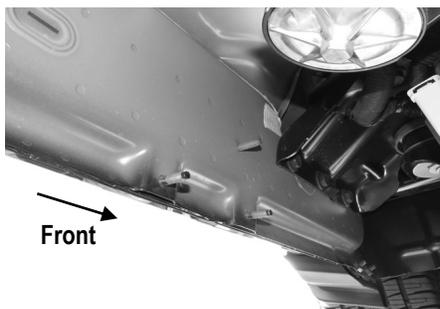

(Fig 1) Driver Front Mounting Bracket Location
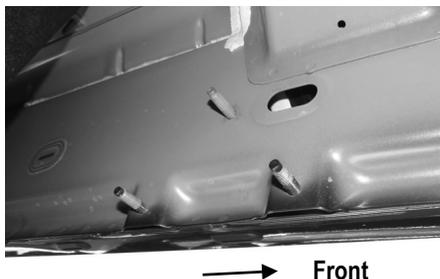
(Fig 2) Driver Center Mounting Bracket Location
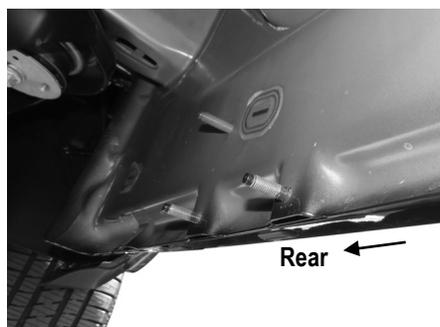
(Fig 3) Driver Rear Mounting Bracket Location

STEP 2

Select (1) Mounting Bracket. <u>**NOTE: All (6) Mounting Brackets are universal and will fit driver or passenger side**</u>. Attach the Mounting Bracket to the (2) factory studs on the Driver Side Front Mounting Bracket Location with (2) M8 Large Flat Washers and (2) M8X1.25 Nylon Lock Nuts, **(Fig 4)**. Leave bracket loose at this time.

(2) M8 Large Flat Washers

(2) M8X1.25 Nylon Lock Nuts
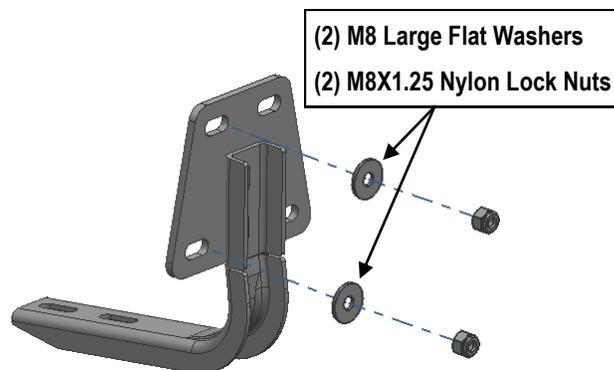
(Fig 4) Driver Front Mounting Bracket Installed

STEP 3

Repeat **Steps 1—2** to install the (2) remaining Driver Center and Rear Mounting Brackets.

STEP 4

Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel **(Fig 5)**. Carefully position the Running Board onto the (3) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts **(Fig 6)**. Do not tighten at this time.

iBoard®

(Fig 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2)M6X1-20mm Square Head Bolts
(2)M6 Large Flat Washers
(2)M6X1 Nylon Lock Nuts
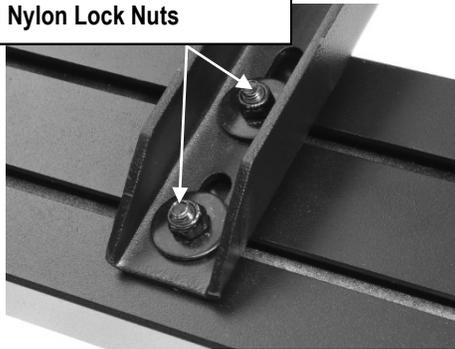
(Fig 6) Running Board Installed Onto Mounting Bracket

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (**Fig 7**).

(Fig 7) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.